

The following catalog
has gaps in its page
numbers, or doesn't
have any numbers.
We have chosen to
leave the page
numbering in the
order that Acrobat
assigns it.

1 A3 ***** DATA TABLE

STANDARD GROUPS

FICHE LOCATION	ILLUSTRATION
1 B13 *****	BATTERY TRAY AND START SWITCH -5.0PK-3E,5.0PN-3E,6.5PM-3E AND 5.0PK-3E,6.5PM-3E
1 B7 *****	BELL, END
1 B9 *****	CONTROL - 1.7PC-1P, 2.2PE-1P, 3.0PL-1P
1 B11 *****	CONTROL - 5.0PK-3E, 6.5PM-3E EXTENDED RUN
1 B11 *****	CONTROL-3.0PL-3P,3.2PF-3P,3.7PF-3P,5.0PK-3P,5.0PN-3P,5.0PK-3E,5.0PN-3E,6.5PM-3E
1 A5 *****	GENERATOR SET - 1.7PC-1P AND 2.2PE-1P
1 A13 *****	GENERATOR SET - 3.0PL-1P
1 A9 *****	GENERATOR SET - 3.0PL-3P, 3.2PF-3P, 3.7PF-3P
1 B1 *****	GENERATOR SET - 5.0PK-3P, 5.0PK-3E, 5.0PN-3P, 5.0PN-3E AND 5.0PK-3E EXTENDED RU
1 B5 *****	GENERATOR SET - 6.5PM-3P, 6.5PM-3E AND 6.5PM-3E EXTENDED RUN
1 B13 *****	OIL TANK AND FUEL PUMP - EXTENDED RUN 5.0PK-3E, 6.5PM-3E
1 C1 *****	PUMP PARTS, FUEL - EXTENDED RUN 5.0PK-3E, 6.5PM-3E
1 C1 *****	TANK ASSEMBLY, FUEL - EXTENDED RUN 5.0PK-3E, 6.5PM-3E

OPTIONAL PARTS SECTION (C3)

FICHE LOCATION	ILLUSTRATION
1 C7 *****	BOARD, PRINTED CIRCUIT (IDLEMATIC SENSOR CONTROL)-300-1801
1 C5 *****	BOARD, PRINTED CIRCUIT (IDLEMATIC SENSOR CONTROL)-300-1435
1 C7 *****	CHARGER, BATTERY
1 C5 *****	CONTROL, IDLEMATIC-150-1763
1 C3 *****	CONTROL, IDLEMATIC-150-1667
1 C9 *****	CONTROL, SIDE MOUNTED
1 C13 *****	DOLLY
1 C13 *****	DOLLY
1 C11 *****	HANDLE, E-Z TOTE
1 C11 *****	PLUG, RECEPTACLE
1 C11 *****	WHEELER, E-Z

919-0307 (11-79)
"P" SERIES (BEGIN SPEC H)
PARTS CATALOG


This catalog applies to the Alternators listed below. Parts are arranged in groups of related items. Each illustrated part is identified by a reference number corresponding to the same reference number in the parts list for that group. Parts illustrations are typical. To determine correct quantity used column, check alternator nameplate for correct Model number. Right and left plant sides are determined by facing the blower end (front) of alternator.

GENERATOR DATA TABLE

MODEL	WATTS	VOLTS	ENGINE H.P.	BRIGGS & STRATTON MODEL NO.	BRIGGS & STRATTON ENG. TYPE NO.	QUANTITY USED COLUMN											
						A	B	C	D	E	F	G	H	I	J	K	L
1.7PC-1P/*	1750	120	4	100212	0583-01	X											
2.2PE-1P/*	2250	120	5	150212	0921-01	X											
3.0PL-1P/*	3000	120	7	170412	1734-02		X										
3.0PL-3P/*	3000	120/240	7	170412	1734-02			X									
3.2PF-3P/*	3250	120/240	8	190432	1798-01				X								
3.7PF-3P/*	3750	120/240	8	190432	1798-01					X							
5.0PK-3P/*	5000	120/240	10	251412	0214-01						X						
5.0PN-3E/*	5000	120/240	11	252412	0187-01						X						
^o 5.0PK-3E/*	5000	120/240	10	220435	0130-01							X					
^o 5.0PN-3E/*	5000	120/240	11	252415	0189-01							X					
6.5PM-3P/*	6500	120/240	16	326432	0302-01									X			
^o 6.5PM-3E/*	6500	120/240	16	326435	0296-01										X		
EXTENDED RUN MODELS -+																	
^o 5.0PK-3E/*	5000	120/240	10	220435	0140-01											X	
^o 6.5PM-3E/*	6500	120/240	16	326435	0338-01												X

- * - The Specification Letter Advances (A to B, B to C, etc.) with Manufacturing Changes.
- ^o - These Generator Sets are electric starting.
- + - These Generator Sets have Oil Maintenance Systems and require optional 5 gallon Fuel Tank.

GENERATOR SET **(1.7PC-1P, 2.2PE-1P)**

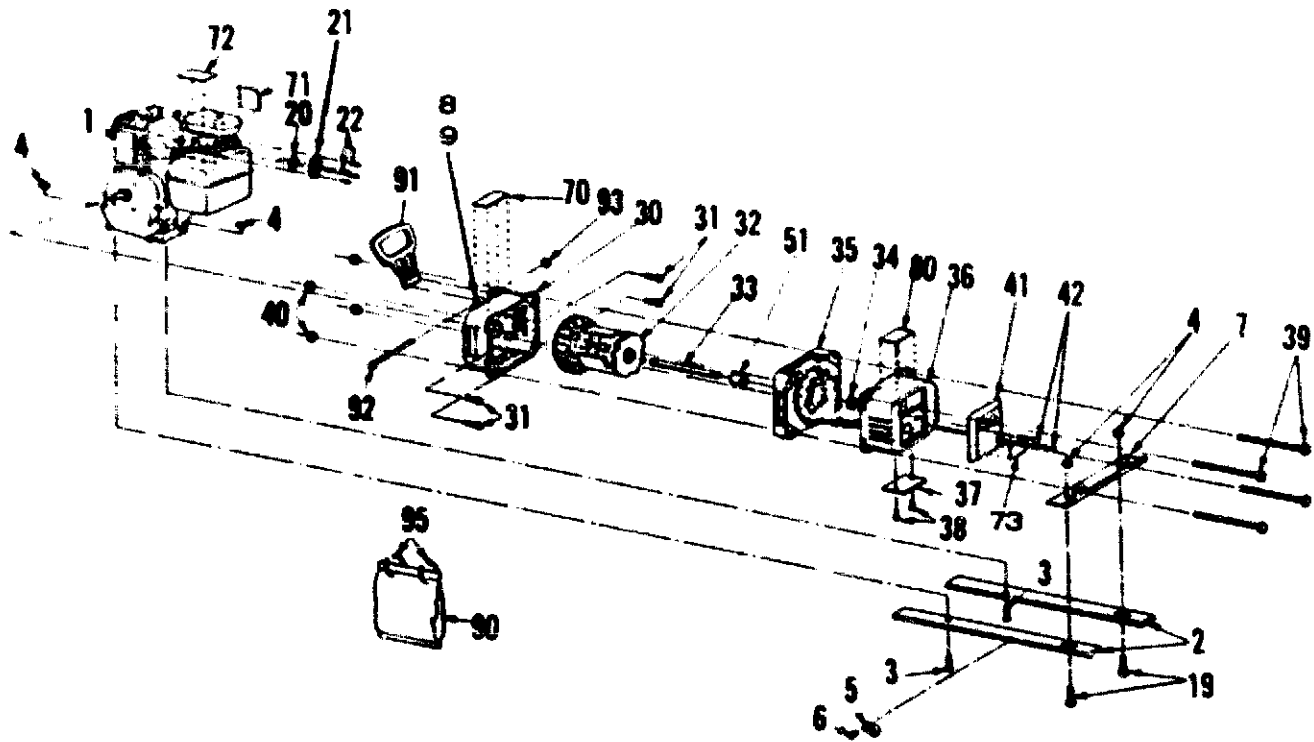

539-0439


546-1176

546-1162

546-1240

**GENERATOR SET
(1.7PC-1P, 2.2PE-1P)**

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED											
			A	B	C	D	E	F	G	H	J	K	L	
1	Engine	(Refer to Manufacturer For Components)												
	100-1644	4 Horsepower (Briggs & Stratton Model 100212, Spec 0583-01)	1											
	100-1615	5 Horsepower (Briggs & Stratton Model 130212, Spec 0921-01)		1										
2	403-1473	Channel, Mounting	2	2										
3	815-0501	Screw, Cap-Hex Head W/ET (5/16-18 X 1-1/2")	2	2										
4	870-0348	Nut, Hex W/ET (5/16-18)	4	4										
5	332-2178	Lug, Single Terminal	1	1										
6	815-0181	Screw, Cap-Hex Head W/ET (#10-32 X 1/2")	1	1										
7	403-1470	Bracket, Generator Mounting	1	1										
8	403-1172	Hinge, Carrying Handle	2	2										
9	815-0334	Screw, Cap-Hex Head Locking (5/16-18 X 5/8")	2	2										
19	815-0500	Screw, Cap-Hex Head W/ET (5/16-18 X 3/4")	2	2										
20	155-1528	Arrestor, Spark - Optional	1	1										
21	155-1702	Deflector, Muffler - Optional	1	1										
22	155-1539	Screw, Muffler - Optional	4	4										
30	231-0226	Adapter, Generator	1	1										
31	815-0493	Screw, Cap-Hex Head W/IT (5/16-24 X 3/4")	4	4										
32	201-2751	Rotor	1											
32	201-2746	Rotor		1										
33	520-0889	Stud, Rotor Through	1											
33	520-0880	Stud, Rotor Through		1										
34	870-0271	Nut, Internal Wrenching	1	1										
35	220-3101	Stator	1											
35	220-3102	Stator		1										
36	211-0301	Bell Assembly, End (See Separate Group For Components)	1	1										
37	234-0526	Cover, Protection	1	1										
38	815-0340	Screw, Cap-Hex Head (#10-32 X 3/8")	2	2										
39	800-0018	Screw, Cap-Hex Head (1/4-20 X 3-3/4")	4											
39	800-0021	Screw, Cap-Hex Head (1/4-20 X 4-1/2")		4										
40	870-0232	Nut, Hex W/ET (1/4-20)	4	4										
41	300-1911	Control Assembly (See Separate Group For Components)	1	1										
42	815-0497	Screw, Cap-Hex Head W/Pilot (#6-32 X 1.88")	2	2										
51	202-0674	Sleeve, Generator Shaft	1	1										
70	98-3575	Label, Caution	1	1										
71	98-3657	Label, Service Instructions	1											
71	98-3658	Label, Service Instructions		1										
72	98-3674	Label, Air Cleaner	1	1										
73	98-3721	Label, Receptacle Panel	1											
73	98-3722	Label, Receptacle Panel		1										
90		Accessory Package - Containing Parts Indented:	1	1										
	402-0425	Dampener, Vibration	4	4										
	526-0128	Washer, Flat (15/32" ID X 1-1/2" OD X 1/4")	4	4										


Cummins Power Generation

Redistribution or publication of this document by any means is strictly prohibited.

**GENERATOR SET
(1.7PC-1P, 2.2PE-1P)**

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED									
			A	B	C	D	E	F	G	H	J	K
	821-0017	Screw, Cap-Hex Head Locking (5/16-18 X 1/2")	4	4								
91	403-1173	Handle Carrying	1	1								
92	800-0021	Screw, Cap-Hex Head (1/4-20 X 4-1/2")	1	1								
93	870-0065	Nut, Hex-Locking (1/4-20)	1	1								
95	332-0941	Tie, Cable	2	2								

GENERATOR SET **(3.0PL-3P, 3.2PF-3P, 3.7 PF-3P)**

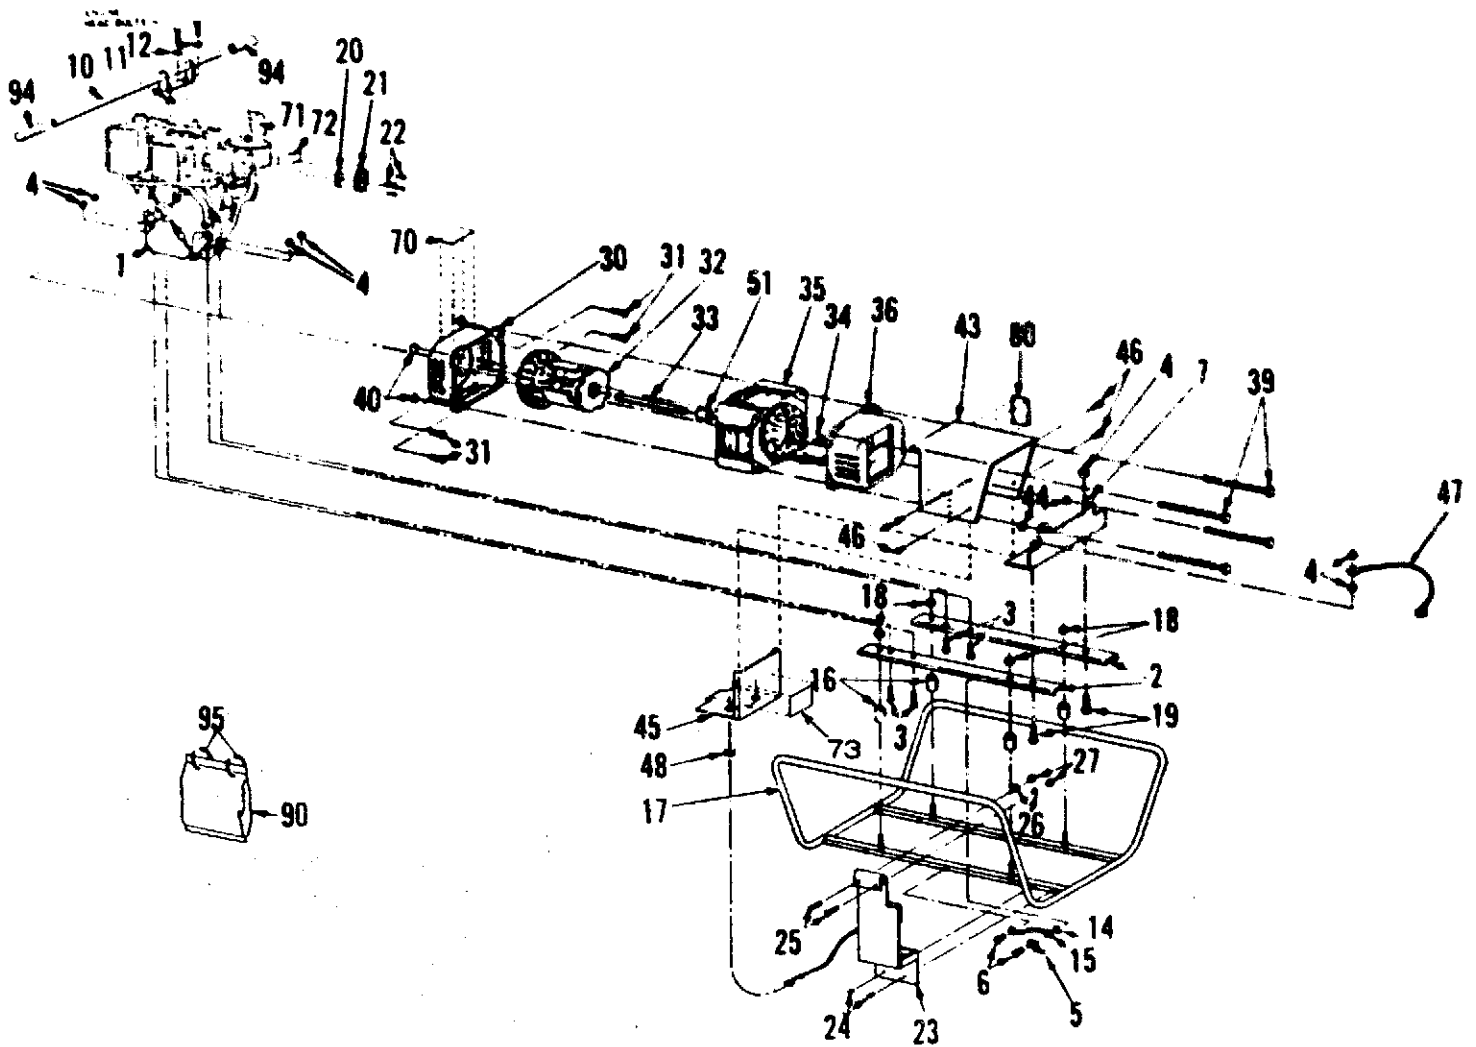

539-0435

546-1231


546-1184

546-1232

546-1240

GENERATOR SET
(3.0PL-3P, 3.2PF-3P, 3.7 PF-3P)

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED											
			A	B	C	D	E	F	G	H	J	K	L	
1	Engine	(Refer to Manufacturer For Components)												
	100-1605	7 Horsepower (Briggs & Stratton Model 190412, Spec 1734-02)				1								
	100-1616	8 Horsepower (Briggs & Stratton Model 190432, Spec 1798-01)					1	1						
2	405-1473	Channel, Mounting				2	2	2						
3	815-0495	Screw, Cap-Hex Head W/ET (5/16-18 X 1-3/4")				4	4	4						
4	870-0348	Nut, Hex W/ET (5/16-18)				6	6	6						
5	352-2178	Lug, Single - Terminal				1	1	1						
6	815-0181	Screw, Cap-Hex Head W/ET (#10-32 X 1/2")				1	1	2						
7	405-1471	Bracket, Generator Mounting				1	1	1						
10	405-1465	Handle, Carrying				1								
11	405-1486	Spacer, Handle				1								
12	856-0008	Washer, Lock-EIT (5/16")				2								
14	856-0003	Washer, Lock-EIT (#10)					1	1						
15	357-0097	Strap, Ground					1	1						
16	402-0420	Dampener, Vibration					4	4						
17	405-1476	Frame, Carrying					1	1						
18	870-0297	Nut, Hex-Locking (3/8-16)					4	4						
19	815-0500	Screw, Cap-Hex Head W/ET (5/16-18 X 3/4")				2	2	2						
20	155-1528	Arrestor, Spark - Optional				1	1	1						
21	155-1702	Deflector, Muffler - Optional				1	1	1						
22	155-1539	Screw, Muffler - Optional				4	4	4						
30	231-0227	Adapter				1	1	1						
31	815-0494	Screw, Cap-Hex Head W/ET (3/8-16 X 7/8")				4	4	4						
32	201-2747	Rotor				1	1							
32	201-2748	Rotor						1						
33	520-0882	Stud, Rotor Through				1	1							
33	520-0879	Stud, Rotor Through						1						
34	870-0271	Nut, Internal Wrenching				1	1	1						
35	220-3105	Stator				1	1							
35	220-3106	Stator						1						
36	211-0501	Bell Assembly, End (See Separate Group For Components)				1	1	1						
39	800-0185	Screw, Cap-Hex Head (1/4-20 X 5-1/2")				4	4	4						
40	870-0232	Nut, Hex W/ET (1/4-20)				4	4	4						
43	301-4755	Wrapper, Receptacle Panel				1	1	1						
44	854-0014	Washer, Lock-IT (1/4")				2	2	2						
45	300-1910	Control Assembly (See Separate Group For Components)				1								
45	300-1912	Control Assembly (See Separate Group For Components)					1	1						
46	815-0498	Screw, Cap-Hex Head W/Coned Washer				4	4	4						
51	202-0674	Sleeve, Generator Shaft				1	1	1						



Redistribution or publication of this document by any means is strictly prohibited.


GENERATOR SET
(3.0PL-3P, 3.2PF-3P, 3.7 PF-3P)

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED											
			A	B	C	D	E	F	G	H	J	K	L	
70	98-3575	Label, Caution				1	1	1						
71	98-3659	Label, Service Instructions				1								
71	98-3660	Label, Service Instructions					1	1						
72	98-3674	Label, Air Cleaner				1	1	1						
73	98-3935	Label, Receptacle Panel				1								
73	98-3936	Label, Receptacle Panel					1							
73	98-3937	Label, Receptacle Panel						1						
80		Model Identification Plate				1	1	1						
90		Accessory Package - Containing Indented Parts:				1								
	402-0425	Dampener, Vibration				4								
	526-0128	Washer, Flat (15/32" ID X 1-1/2" OD X 1/4")				4								
	821-0017	Screw, Cap-Hex Head Locking (5/16-18 X 1/2")				4								
90		Accessory Package - Containing Indented Parts:					1	1						
	325-0863	Cap, Twistlock - NEMA # L6-20P (20 Amp, 240 Volt), Optional					1	1						
	325-0862	Cap, Twistlock - NEMA # L5-30P (30 Amp, 120 Volt), Optional					1	1						
94	405-1477	Grip, Handle				2								
95	332-0941	Tie, Cable				2								

Power Generation

Redistribution or publication of this document by any means is strictly prohibited.

GENERATOR SET (3.0PL-1P)

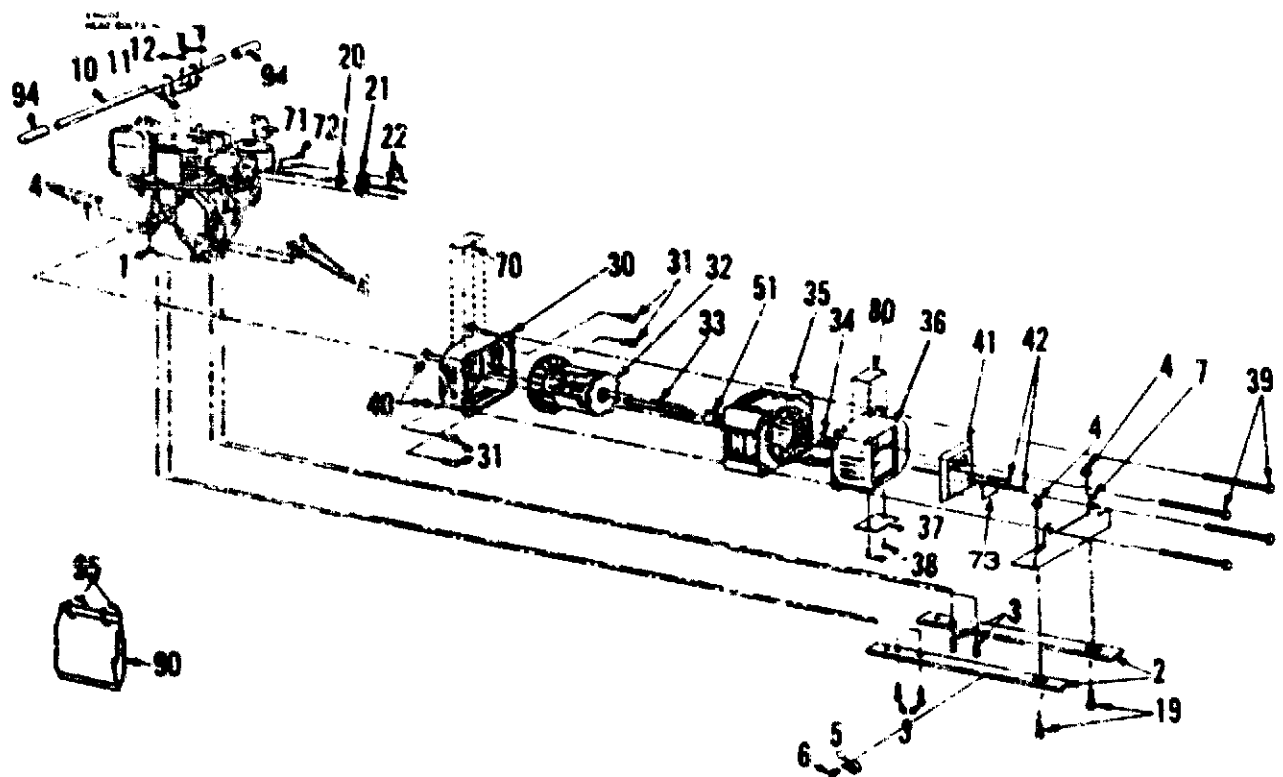


538-0438

546-1163

546-1240


GENERATOR SET (3.0PL-1P)

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED											
			A	B	C	D	E	F	G	H	J	K	L	
1	100-1603	Engine - 7 Horsepower (Briggs & Stratton Model 170412, Spec 1734-02) - Refer to Manufacturer for Components			1									
2	403-1475	Channel, Mounting			2									
3	815-0495	Screw, Cap-Hex Head W/ET (5/16-18 X 1-3/4")			4									
4	870-0348	Nut, Hex W/ET (5/16-18)			6									
5	332-2178	Lug, Single Terminal			1									
6	815-0181	Screw, Cap-Hex Head W/ET (#10-32 X 1/2")			1									
7	403-1471	Bracket, Generator Mounting			1									
10	403-1463	Handle, Carrying			1									
11	403-1486	Spacer, Handle			1									
12	856-0008	Washer, Lock-EIT (5/16")			2									
19	815-0500	Screw, Cap-Hex Head W/ET (5/16-18 X 3/4")			2									
20	155-1528	Arrestor, Spark - Optional			1									
21	155-1702	Deflector, Muffler - Optional			1									
22	155-1539	Screw, Muffler - Optional			4									
30	251-0227	Adapter, Generator			1									
31	815-0494	Screw, Cap-Hex Head W/IT (3/8-16 X 7/8")			4									
32	201-2747	Rotor			1									
33	520-0882	Stud, Rotor Through			1									
34	870-0271	Nut, Internal Wrenching			1									
35	220-3105	Stator			1									
36	211-0301	Bell Assembly, End (See Separate Group For Components)			1									
37	234-0526	Cover, Protection			1									
38	815-0340	Screw, Cap-Hex Head (#10-32 X 3/8")			2									
39	800-0187	Screw, Cap-Hex Head (1/4-20 X 5")			4									
40	870-0232	Nut, Hex W/ET (1/4-20)			4									
41	300-1911	Control Assembly (See Separate Group For Components)			1									
42	815-0497	Screw, Cap-Hex Head W/Pilot (#6-32 X 1.88")			2									
51	202-0674	Sleeve, Generator Shaft			1									
70	98-3575	Label, Caution			1									
71	98-3659	Label, Service Instructions			1									
72	98-3674	Label, Air Cleaner			1									
73	98-3723	Label, Receptacle Panel			1									
90		Accessory Package - Containing Parts Indented:			1									
	402-0425	Dampener, Vibration			4									
	526-0128	Washer, Flat (15/32" ID X 1-1/2" OD X 1/4")			4									
	821-0017	Screw, Cap-Hex Head Locking (5/16-18 X 1/2")			4									
94	403-1477	Grip, Handle			2									
95	332-0941	Tie, Cable			2									

Power Generation

Redistribution or publication of this document by any means is strictly prohibited.

GENERATOR SET **(5.0PK-3P, 5.0PK-3E, 5.0PN-3P, 5.0PN-3E** **and 5.0PK-3E Extended Run)**

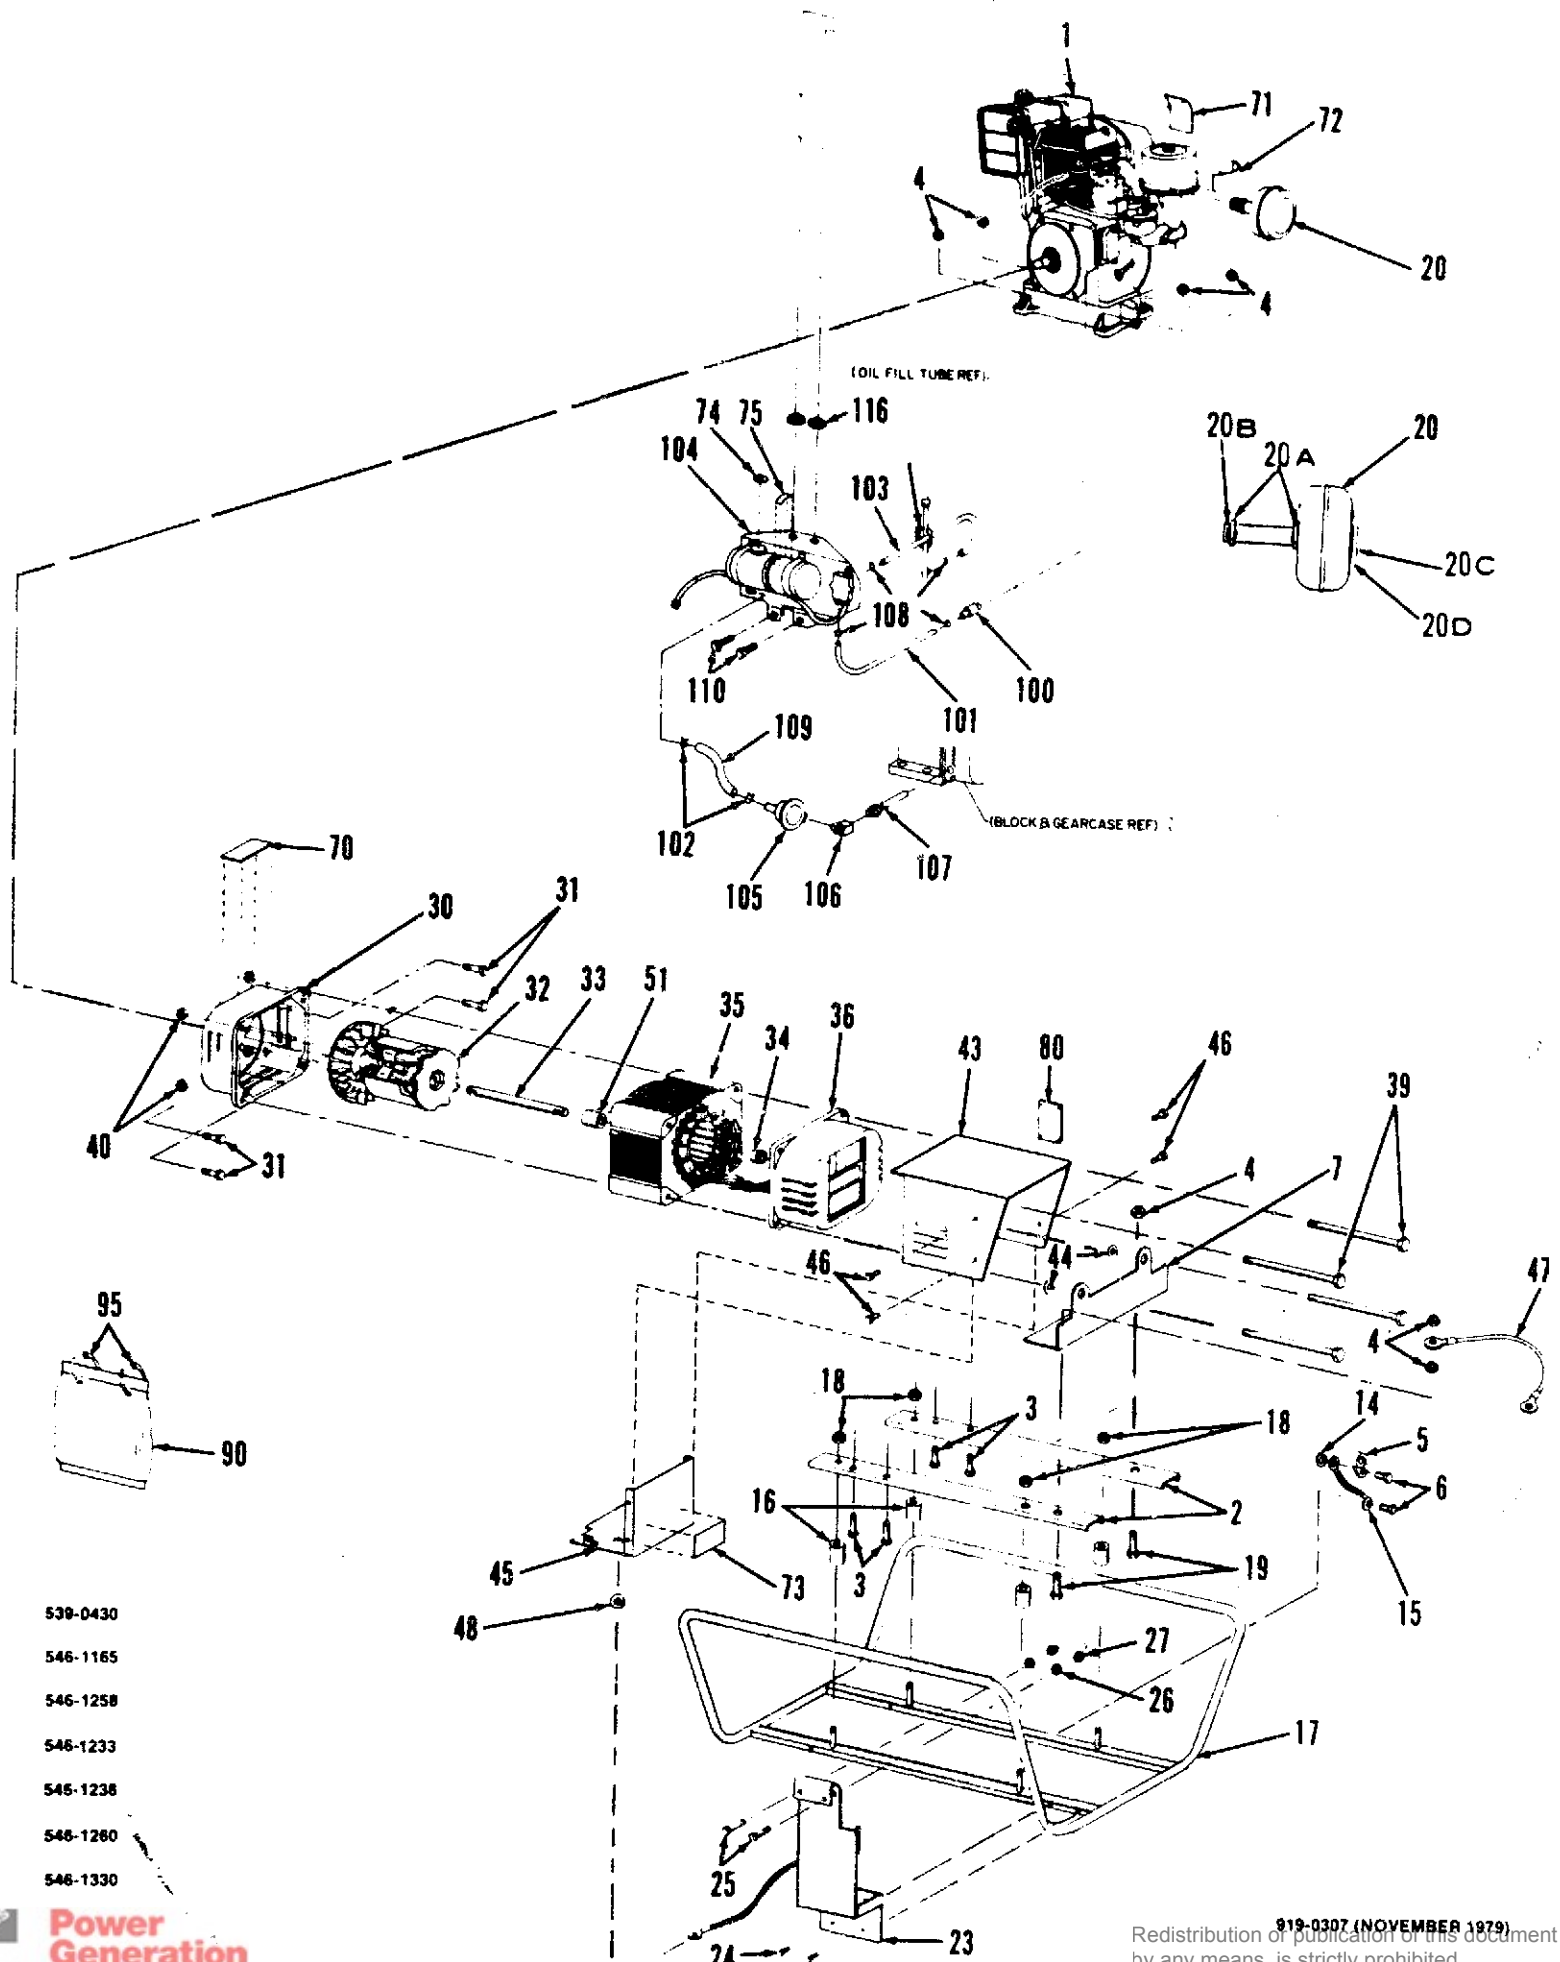

539-0430

546-1165

546-1258

546-1233


546-1238

546-1260

546-1330

GENERATOR SET
(5.0PK-3P, 5.0PK-3E, 5.0PN-3P, 5.0PN-3E
and 5.0PK-3E Extended Run)

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED											
			A	B	C	D	E	F	G	H	J	K	L	
1	Engine	(Refer to Manufacturer for Components)												
	100-1617	10 Horsepower - For 5.0 PK-3P (Briggs & Stratton Model 251412, Spec 0214-01)								1				
	100-1681	11 Horsepower - For 5.0 PN-3P (Briggs & Stratton Model 252412, Spec 0187-01)								1				
	100-1648	10 Horsepower - For 5.0 PK-3E (Briggs & Stratton Model 220435, Spec 0130-01)									1			
	100-1682	11 Horsepower - For 5.0 PN-3E (Briggs & Stratton Model 252415, Spec 0189-01)										1		
	100-1711	10 Horsepower - For 5.0 PK-3E (Briggs & Stratton Model 220435, Spec 0140-01)											1	
2	403-1479	Channel, Mounting								2	2		2	
3	815-0495	Screw, Cap-Hex Head W/ET (5/16-18 X 1-3/4")								4	4		4	
4	870-0348	Nut, Hex W/ET (5/16-18)								6	7		7	
5	332-2178	Lug, Single Terminal								1	1		1	
6	815-0181	Screw, Cap-Hex Head W/ET (#10-32 X 1/2")								2	2		2	
7	403-1471	Bracket, Generator Mounting								1	1		1	
14	856-0003	Washer, Lock-EIT (#10)								1	1		1	
15	337-0097	Strap, Ground								1	1		1	
16	402-0421	Dampener, Vibration								4	4		4	
17	403-1476	Frame, Carrying								1				
17	403-1499	Frame, Carrying									1		1	
18	870-0297	Nut, Hex-Locking (3/8-16)								4	4		4	
19	815-0500	Screw, Cap-Hex Head W/ET (5/16-18 X 3/4")								2	2		2	
20	155-1564	Muffler, Exhaust								1	1		1	
20A	331-0053	Locknut, Exhaust								2	2		2	
20B	505-0088	Nipple, Pipe - Exhaust								1	1		1	
20C	155-1537	Spark Arrestor, Muffler (Optional)								1	1		1	
20D	155-1539	Screw, Muffler (Optional)								4	4		4	
23		Tray Assembly, Battery (See Separate Group)										1	1	
24	815-0340	Screw, Cap-Hex Head (#10-32 X 3/8")									2		2	
25	800-0009	Screw, Cap-Hex Head (1/4-20 X 1-1/2")									2		2	
26	870-0212	Nut, Hex-Locking (1/4-20)									2		2	
27	866-0001	Nut, Hex-Acorn (1/4-20)									2		2	
30	231-0227	Adapter								1	1		1	
31	815-0494	Screw, Cap-Hex Head W/IT (3/8-16 X 7/8")								4	4		4	
32	201-2749	Rotor								1	1		1	
33	520-0883	Stud, Rotor Through								1	1		1	
34	870-0271	Nut, Internal Wrenching								1	1		1	
35	220-3107	Stator								1	1		1	
36	211-0301	Bell Assembly, End (See Separate Group)								1	1		1	
39	800-0186	Screw, Cap-Hex Head (1/4-20 X 6-1/2")								4	4		4	




Power
Generation

Redistribution or publication of this document
by any means is strictly prohibited

GENERATOR SET
(5.0PK-3P, 5.0PK-3E, 5.0PN-3P, 5.0PN-3E
and 5.0PK-3E Extended Run)

REF NO	PART NUMBER	PART DESCRIPTION	QUANTITY USED										
			A	B	C	D	E	F	G	H	J	K	
40	870-0232	Nut, Hex W/ET (1/4-20)							4	4			
43	301-4755	Wrapper, Receptacle Panel							1	1			
44	854-0014	Washer, Lock-IT (1/4")							2	2			
45	300-1912	Control Assembly (See Separate Group)							1	1			
45	300-1952	Control Assembly (See Separate Group)											
46	815-0498	Screw, Cap-Hex Head W/Cone Washer							4	4			
47	336-4455	Lead								1			
48	508-0148	Grommet, Rubber								1			
51	202-0674	Sleeve, Generator Shaft							1	1			
70	98-3575	Label, Caution							1	1			
71	98-3661	Label, Service Instructions (PK Sets)							1	1			
71	98-3824	Label, Service Instructions (PN Sets)							1	1			
72	98-3674	Label, Air Cleaner							1	1			
73	98-3938	Label, Receptacle Panel							1	1			
74	98-3999	Label, Engine Oil											
75	98-4001	Label, Oil Instructions											
80		Model Identification Plate							1	1			
90		Accessory Package - Contains Parts Indented:											
	416-0696	Hold-down, Battery								1			
	865-0011	Nut, Wing (#10-32)								1			
	192-0399	Rope, Start								2			
95	332-0491	Tie, Cable								1			
100	149-1353	Filter, Fuel							2	2			
101	503-1019	Hose, Fuel (1/4" ID X 14")											
102	503-0170	Clamp, Hose											
103	503-1021	Hose, Fuel Pump Vacuum											
104		Tank Assembly, Oil (See Separate Group)											
105	123-0870	Regulator, Oil Level											
106	502-0156	Elbow, Street (45°)											
107	123-1475	Adapter, Oil Fill											
108	503-0731	Clamp, Hose											
109	503-1024	Hose, Oil (3/8" ID X 10-1/2")											
110	821-0014	Screw, Cap-HWH (5/16-18 X 1/2")											
116	856-0008	Washer, Lock-EIT (5/16")											

(6.5PM-3P, 6.5PM-3E and
6.5PM-3E Extended Run)

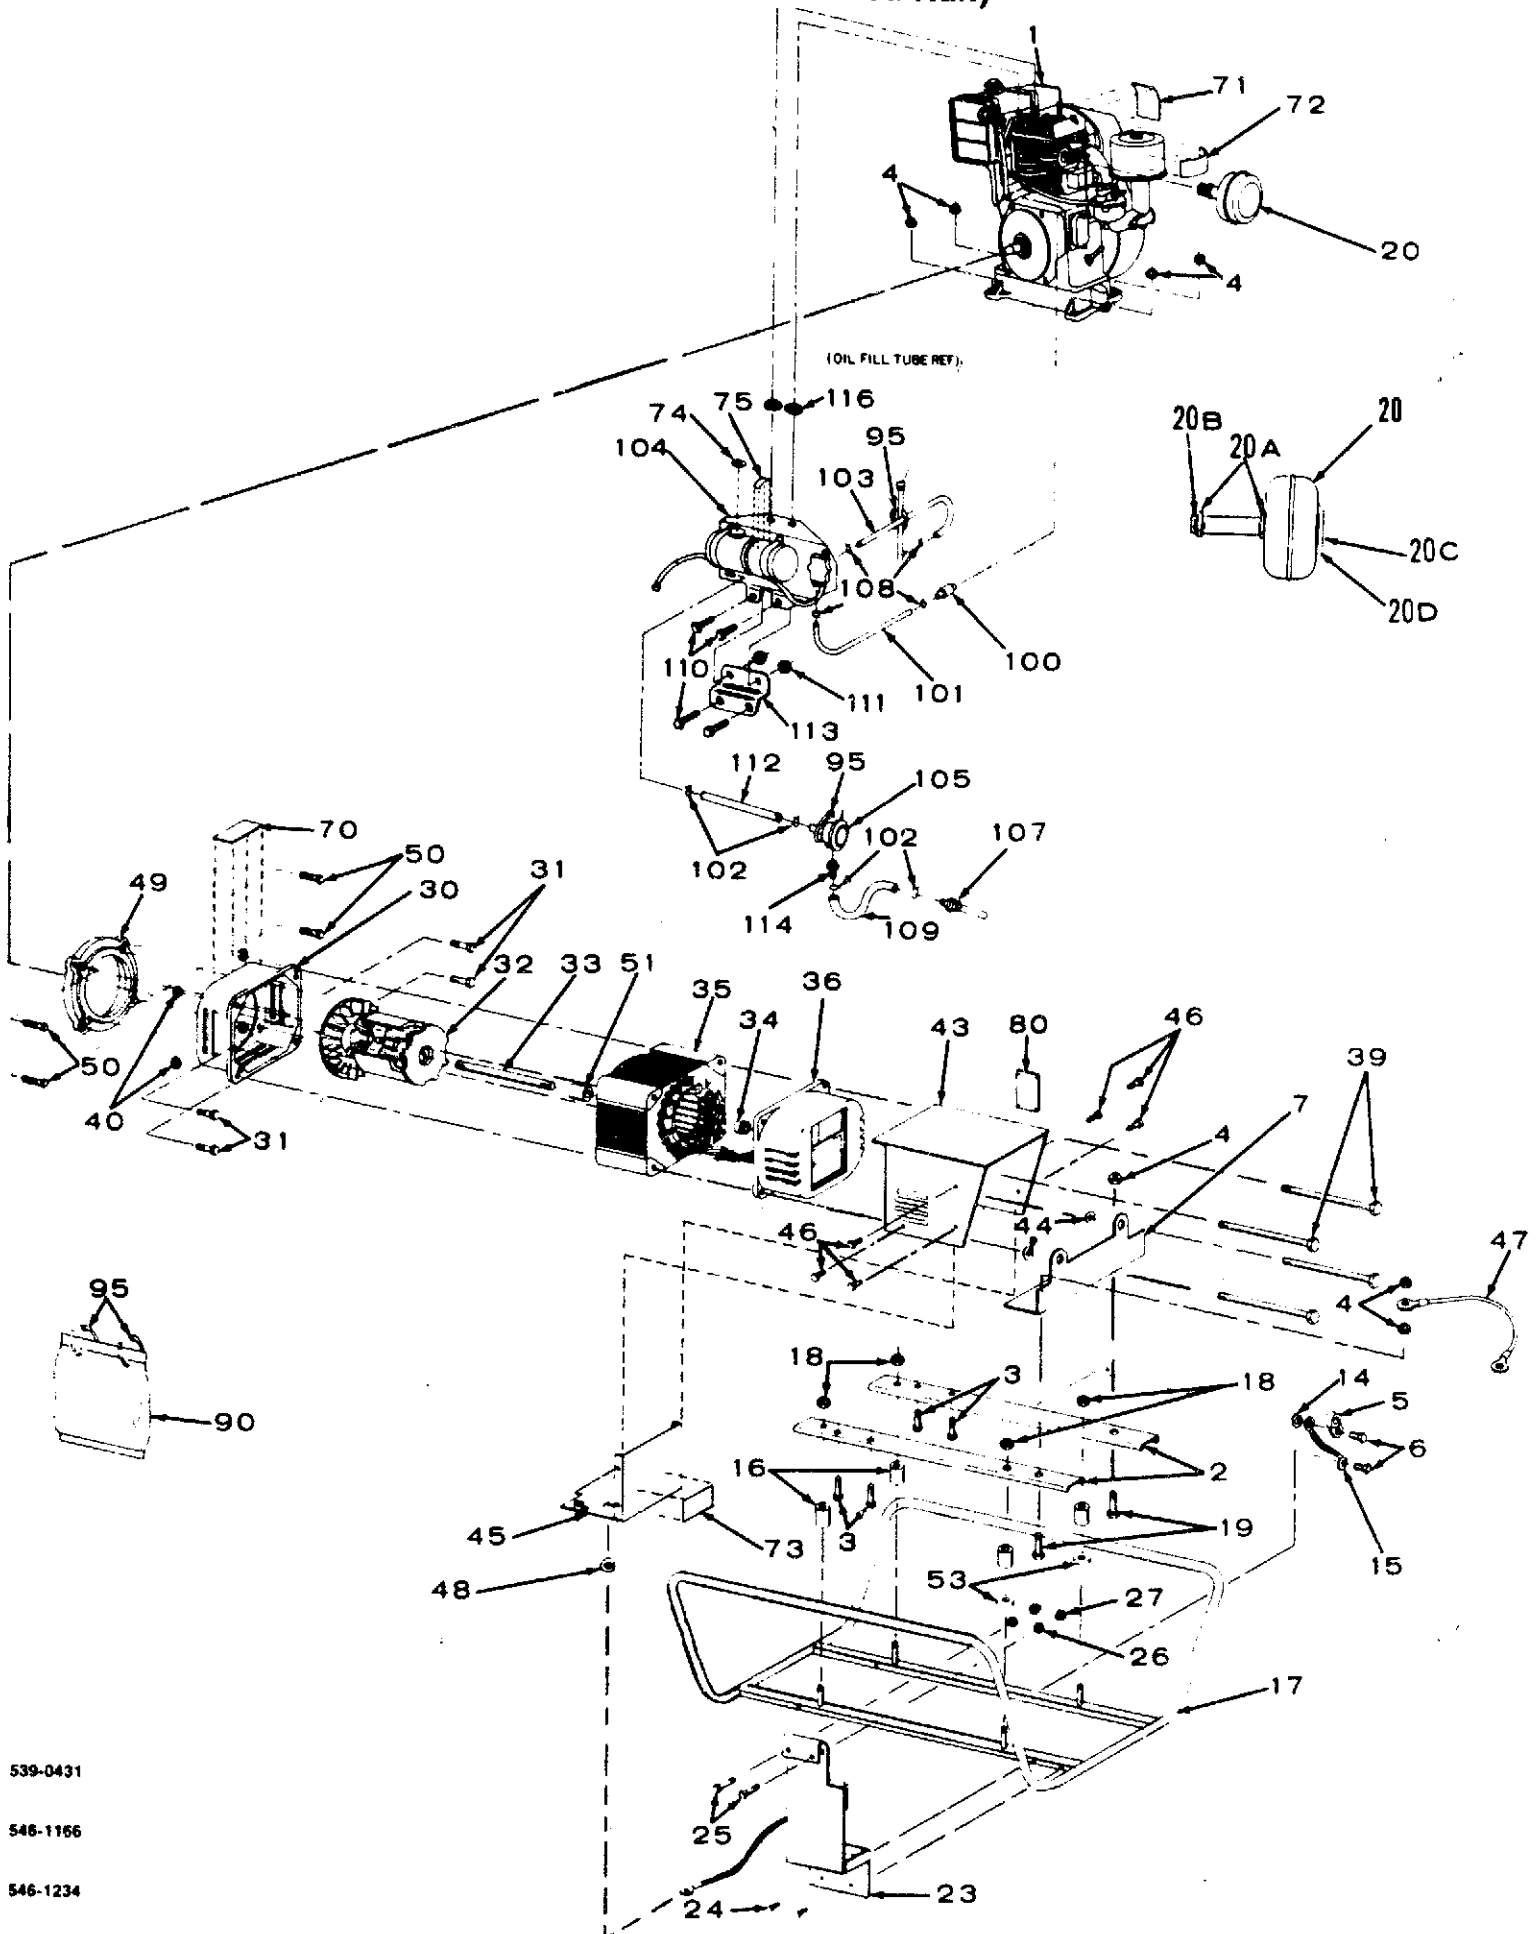

539-0431

546-1166

546-1234

546-1238

546-1332

GENERATOR SET
(6.5PM-3P, 6.5PM-3E and
6.5PM-3E Extended Run)

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
1	Engine	(Refer to Manufacturer for Components)														
	100-1618	16 Horsepower (Briggs & Stratton Model 326432, Spec 0302-01)									1					
	100-1649	16 Horsepower (Briggs & Stratton Model 326435, Spec 0296-01)										1				
	100-1712	16 Horsepower (Briggs & Stratton Model 326435, Spec 0338-01)												1		
2	403-1479	Channel, Mounting									2	2		2		
3	815-0495	Screw, Cap-Hex Head W/ET (5/16-18 X 1-3/4")									4	4		4		
4	870-0348	Nut, Hex W/ET (5/16-18)									6	7		7		
5	332-2178	Lug, Single, Terminal									1	1		1		
6	815-0181	Screw, Cap-Hex Head W/ET (#10-32 X 1/2")									2	2		2		
7	403-1472	Bracket, Generator Mounting									1	1		1		
14	856-0003	Washer, Lock-EIT (#10)									1	1		1		
15	337-0097	Strap, Ground									1	1		1		
16	402-0421	Dampener, Vibration									4	4		4		
17	403-1476	Frame, Carrying									1					
17	403-1499	Frame, Carrying										1		1		
18	870-0297	Nut, Hex-Locking (3/8-16)									4	4		4		
19	815-0500	Screw, Cap-Hex Head W/ET (5/16-18 X 3/4")									2	2		2		
20	155-1564	Muffler, Exhaust									1	1		1		
20A	331-0053	Locknut, Exhaust									2	2		2		
20B	505-0087	Nipple, Pipe-Exhaust									1	1		1		
20C	155-1537	Spark Arrestor, Muffler (Optional)									1	1		1		
20D	155-1539	Screw, Muffler (Optional)									4	4		4		
23		Tray Assembly, Battery (See Separate Group)											1	1		
24	815-0340	Screw, Cap-Hex Head (#10-32 X 3/8")										2		2		
25	800-0009	Screw, Cap-Hex Head (1/4-20 X 1-1/2")										2		2		
26	870-0212	Nut, Hex-Locking (1/4-20)										2		2		
27	866-0001	Nut, Hex-Acorn (1/4-20)										2		2		
30	231-0227	Adapter									1	1		1		
31	815-0494	Screw, Cap-Hex Head W/IT (3/8-16 X 7/8")									4	4		4		
32	201-2750	Rotor									1	1		1		
33	520-0881	Stud, Rotor Through									1	1		1		
34	870-0271	Nut, Internal Wrenching									1	1		1		
35	220-3108	Stator									1	1		1		
36	211-0301	Bell Assembly, End (See Separate Group)									1	1		1		
39	800-0192	Screw, Cap-Hex Head (1/4-20 X 8")									4	4		4		
40	870-0232	Nut, Hex W/ET (1/4-20)									4	4		4		
41	201-1412	Wrench, Ratchet, Panel														

Power Generation

Redistribution or publication of this document by any means, is strictly prohibited.


GENERATOR SET
(6.5PM-3P, 6.5PM-3E and
6.5PM-3E Extended Run)

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
44	854-0014	Washer, Lock-IT (1/4")									2	2		2		
45	300-1968	Control Assembly (See Separate Group For Components)									1	1				
45	300-1952	Control Assembly (See Separate Group For Components)														
46	815-0498	Screw, Cap-Hex Head W/Cone Washer												1		
47	336-4455	Lead									6	6		6		
48	508-0148	Grommet, Rubber										1		1		
49	231-0242	Adapter, Engine to Generator										1		1		
50	802-0095	Screw, Cap-Socket Head (7/16-14 X 1")									1	1		1		
51	202-0674	Sleeve, Generator Shaft									4	4		4		
53	526-0128	Washer, Flat (15/32" ID X 1-1/2" OD X 1/4")									1	1		1		
70	98-3575	Label, Caution									2	2		2		
71	98-3662	Label, Service Instructions									1	1		1		
72	98-3674	Label, Air Cleaner									1	1		1		
73	98-3939	Label, Receptacle Panel									1	1		1		
74	98-3999	Label, Engine Oil									1	1		1		
75	98-4001	Label, Oil Instruction												1		
80		Model Identification Plate									1	1		1		
90		Accessory Package - Contains Parts Identified:														
	416-0696	Hold-down, Battery										1		1		
	865-0011	Nut, Wing (#10-32)										1		1		
	192-0399	Rope, Start										2		2		
95	332-0941	Tie, Cable										1		1		
100	149-1353	Filter, Fuel									2	2		4		
101	503-1022	Hose, Fuel (1/4" ID X 16-1/2")												1		
102	503-0170	Clamp, Hose												1		
103	503-1021	Hose, Fuel Pump Vacuum												4		
104		Tank Assembly, Oil (See Separate Group)												1		
105	123-0870	Regulator, Oil Level												1		
107	123-1476	Adapter, Oil Fill												1		
108	503-0731	Clamp, Hose												4		
109	503-1024	Hose, Oil (3/8" ID X 10-1/2")												1		
110	821-0014	Screw, Cap-HWH (5/16-18 X 1/2")														
111	870-0257	Nut, HWH (5/16-18)												4		
112	503-1023	Hose, Oil (3/8" ID X 6-1/2")												2		
113	150-1089	Support, Oil Tank Bracket												1		
114	502-0584	Connector, Hose												1		
116	856-0008	Washer, Lock-EIT (5/16)												1		
														2		

Power Generation


Redistribution or publication of this document by any means is strictly prohibited.

END BELL

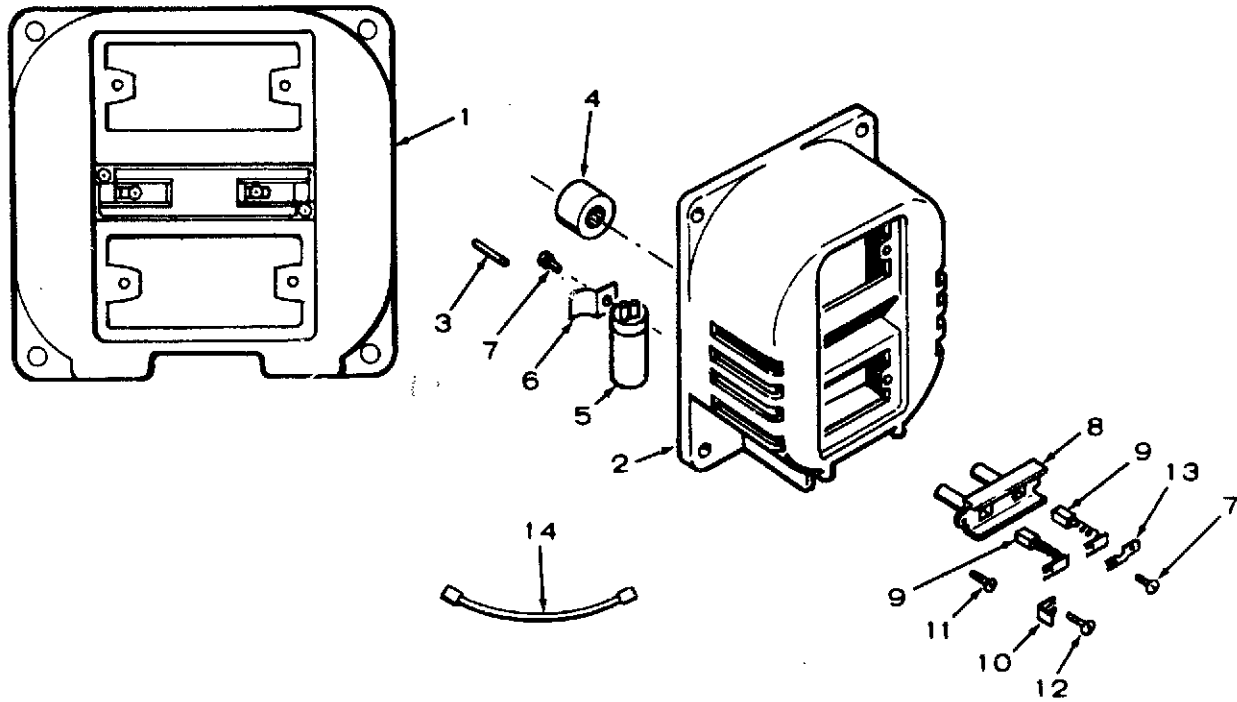


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
1	211-0301	Bell Assembly, Complete	1	1	1	1	1	1	1	1	1	1	1	1		
2	211-0313	Bell Only, End	1	1	1	1	1	1	1	1	1	1	1	1		
3	516-0196	Pin, Locking - End Bell	4	4	4	4	4	4	4	4	4	4	4	4		
4	510-0107	Bearing, Roller	1	1	1	1	1	1	1	1	1	1	1	1		
5	356-0056	Capacitor	1	1	1	1	1	1	1	1	1	1	1	1		
6	312-0194	Bracket, Capacitor Mounting	1	1	1	1	1	1	1	1	1	1	1	1		
7	815-0395	Screw, Tapping - Pan Head (#6 X 3/8")	2	2	2	2	2	2	2	2	2	2	2	2		
8	212-1249	Guide, Brush	1	1	1	1	1	1	1	1	1	1	1	1		
9	214-0099	Brush	2	2	2	2	2	2	2	2	2	2	2	2		
10	332-1564	Terminal, Tab	1	1	1	1	1	1	1	1	1	1	1	1		
11	815-0395	Screw, Tapping - Pan Head	2	2	2	2	2	2	2	2	2	2	2	2		
12	815-0466	Screw, Cap-Hex Head (#6 X 5/8")	1	1	1	1	1	1	1	1	1	1	1	1		
13	332-2194	Terminal, Tab	2	2	2	2	2	2	2	2	2	2	2	2		
14	336-3254	Lead (3-1/4")	1	1	1	1	1	1	1	1	1	1	1	1		
14	336-4251	Lead (3")	1	1	1	1	1	1	1	1	1	1	1	1		

CONTROL **(1.7PC-1P, 2.2PE-1P, 3.0PL-1P)**

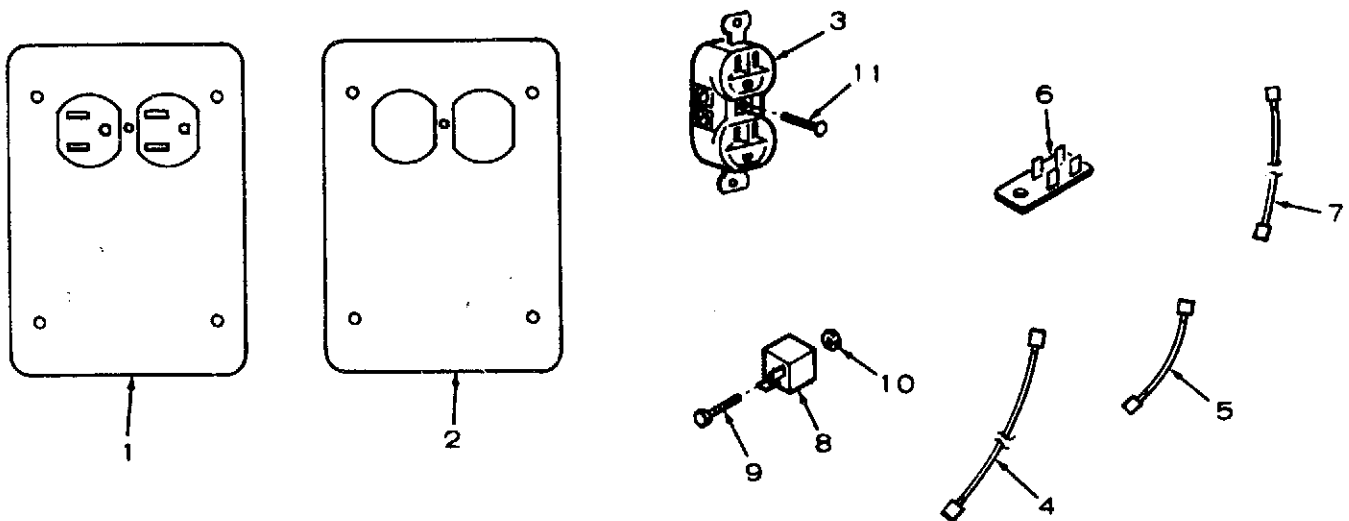

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED										
			A	B	C	D	E	F	G	H	J	K	
1	300-1911	Control Assembly, Complete	1	1	1								
2	301-5612	Box, Receptacle	1	1	1								
3	323-1104	Receptacle, Duplex (120 Volt)	1	1	1								
4	336-4264	Lead (To Negative Brush)	1	1	1								
5	336-4679	Lead (Receptacle to Ground)	1	1	1								
6	332-2138	Terminal, Tab (2 Place)	1	1	1								
7	332-4269	Lead, Rectifier to Positive Brush	1	1	1								
8	305-0548	Rectifier, Bridge	1	1	1								
9	822-2050	Screw, Machine-Pan Head W/ET (#8-32 X 3/4")	1	1	1								
10	860-0008	Nut, Hex (#8-32)	1	1	1								
11	822-2030	Screw, Machine-Pan Head W/ET (#6-32 X 3/8")	1	1	1								


CONTROL
(3.0PL-3P, 3.2PF-3P, 3.7PF-3P, 5.0PK-3P
5.0PN-3P, 5.0PK-3E, 5.0PN-3E, 6.5PM-3E
6.5PM-3P and 5.0PK-3E, 6.5PM-3E Extended Run)

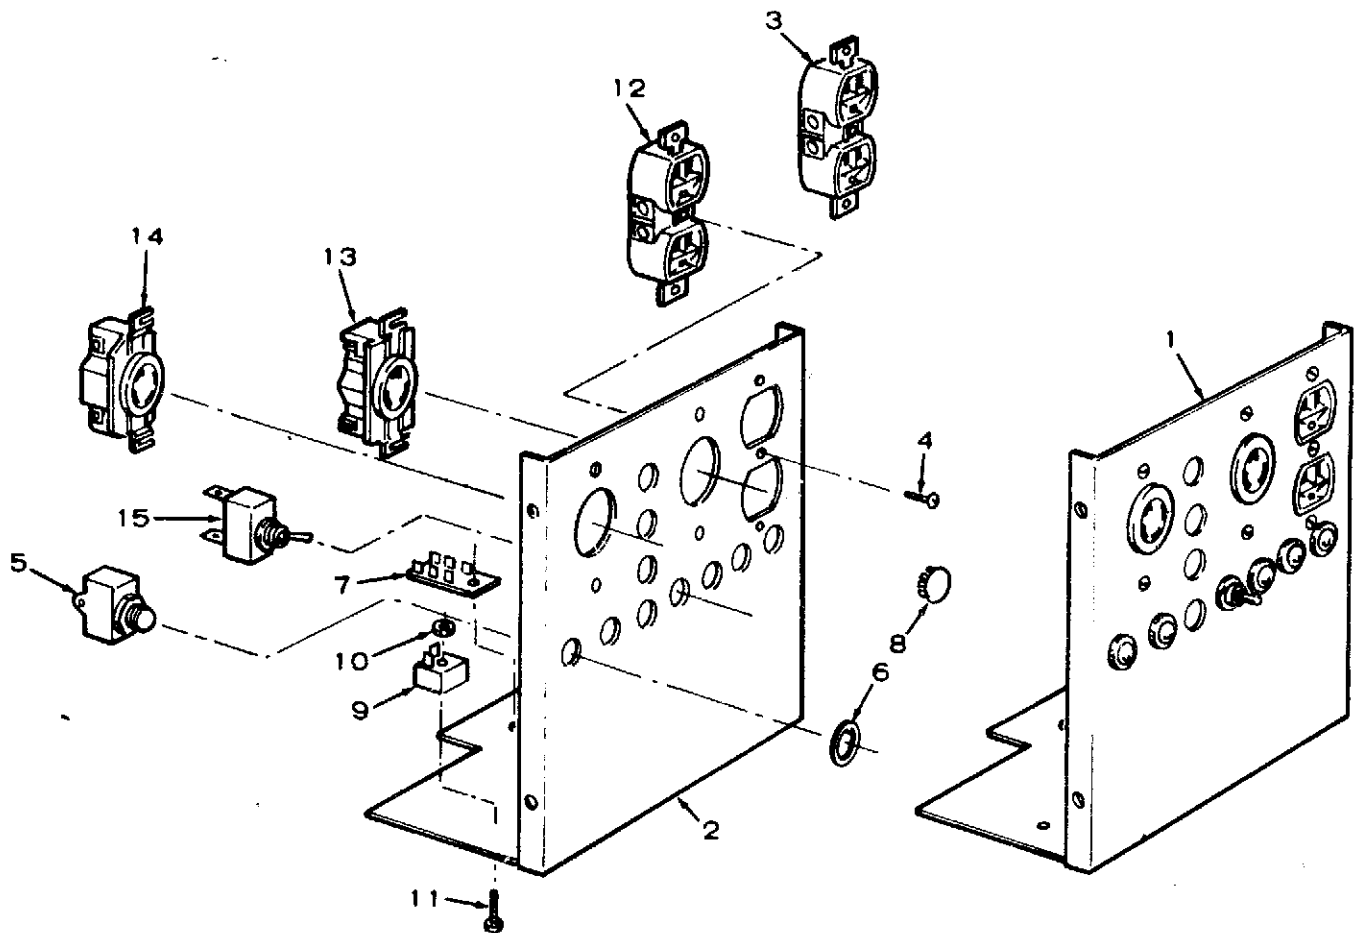

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
1	300-1910	Control Assembly, Complete (Includes Parts Marked a)				1										
1	300-1912	Control Assembly, Complete (Includes Parts Marked b)					1	1	1	1						
1	300-1925	Control Assembly, Complete (Includes Parts Marked c)									1	1				
1	300-1968	Control Assembly, Complete (Includes Parts Marked d)									1	1				
1	300-1952	Control Assembly, Complete (Includes Parts Marked e)														
2	301-5618	Panel, Control a				1								1	1	
2	301-5619	Panel, Control b					1	1	1	1						
2	301-5620	Panel, Control c									1	1				
2	301-5621	Panel, Control d e									1	1	1	1		


**(3.0PL-3P, 3.2PF-3P, 3.7PF-3P, 5.0PK-3P
5.0PN-3P, 5.0PK-3E, 5.0PN-3E, 6.5PM-3E
6.5PM-3P and 5.0PK-3E, 6.5PM-3E Extended Run)**

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
3	323-1104	Receptacle, Duplex - 15 Amp 125 Volt (Parallel Blades) a b c d e				1	1	1	1	1	1	1	1	1		
4	822-2030	Screw, Machine-Pan Head W/ET (#6-32 X 3/8") a b c d e				2	5	5	5	5	5	5	5	5		
5	BREAKER, CIRCUIT															
	320-0540	15 Ampere a b c d e				4	2	2	2	2	2	2	2	2		
	320-0541	20 Ampere b c					2	2	2	2	2	2				
	320-0543	30 Ampere b c e					1	1	1	1	1	1	3	3		
	320-0543	30 Ampere d									3	3				
6	854-0023	Washer, Lock-IT (7/16") a b c d e				4	5	5	5	5	5	5	5	5		
7	332-2139	Terminal, Tag (4 Place) a b c d e				1	1	1	1	1	1	1	1	1		
8	517-0133	Plug, Dot Button (1/2") a b c d e				4	4	4	4	4	4	4	4	4		
9	305-0548	Rectifier, Bridge a b c d e				1	1	1	1	1	1	1	1	1		
10	860-0008	Nut, Hex (#8-32) a b c d e				1	1	1	1	1	1	1	1	1		
11	822-2050	Screw, Machine-Pan Head W/ET (#8-32 X 3/4") a b c d e				1	1	1	1	1	1	1	1	1		
12	323-1105	Receptacle, Duplex-15 Amp, 240 Volt (Tandem Blades) a				1										
13	323-1107	Receptacle, Twistlock-30 Amp, 120 Volt (Three Wire, NEMA #L5-30R) b c d e					1	1	1	1	1	1	1	1		
14	323-1108	Receptacle, Twistlock-20 Amp, 240 Volt (Three Wire, NEMA #L6-20R) b c					1	1	1	1	1	1				
14	323-1109	Receptacle, Twistlock-30 Amp, 240 Volt (Four Wire, NEMA #L14-30R) e												1	1	
14	323-1110	Receptacle, Twistlock-30 Amp, 240 Volt (Three Wire, NEMA #L6-30R) d									1	1				
15	308-0479	Switch, Toggle b c d e					1	1	1	1	1	1	1	1		
NOTE: Throughout this group, alphabetical letters are used to identify components of the various control assemblies. See individual control assemblies listed for code letter on component parts.																




Redistribution or publication of this document by any means is strictly prohibited.

**BATTERY TRAY and START SWITCH
(5.0PK-3E, 5.0PN-3E, 6.5PM-3E and
5.0PK-3E, 6.5PM-3E Extended Run)**

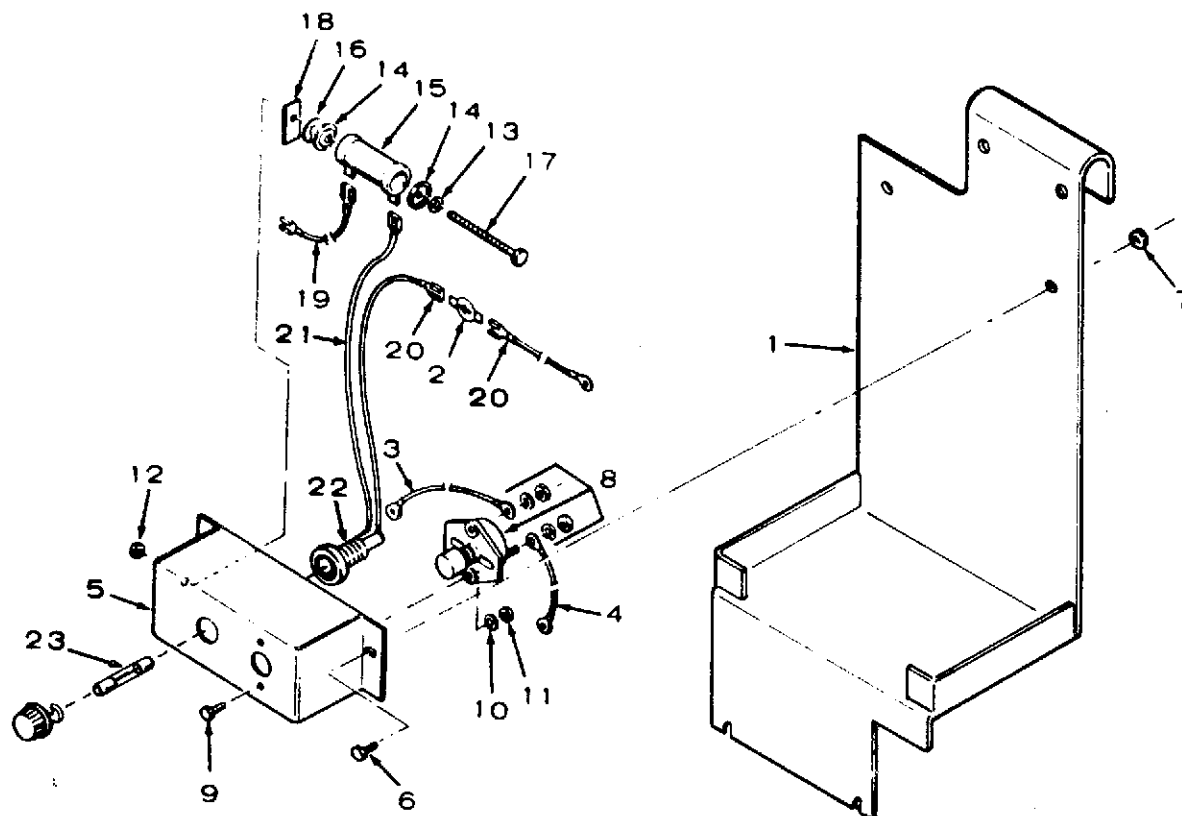


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
1	416-0695	Tray, Battery								1		1	1	1		
2	357-0030	Rectifier, Silicon								1		1	1	1		
3	336-4456	Lead (10")								1		1	1	1		
4	336-4455	Lead (24")								1		1	1	1		
5	301-5373	Cover, Switch								1		1	1	1		
6	821-0005	Screw, Cap-Hex Head Locking (#10-32 X 1/2")								2		2	2	2		
7	870-0320	Nut, Hex-Locking (#10-32)								2		2	2	2		
8	313-0032	Switch, Push-Start								1		1	1	1		
9	812-0128	Screw, Machine-Round Head (#12-24 X 3/4")								2		2	2	2		
10	850-0035	Washer, Lock-Spring (#12)								2		2	2	2		
11	860-0012	Nut, Hex (#12-24)								2		2	2	2		
12	860-0008	Nut, Hex (#8-32)								1		1	1	1		
13	850-0025	Washer, Lock-Spring (#8)								1		1	1	1		
14	304-0015	Washer, Centering								2		2	2	2		
15	304-0217	Resistor, Fixed (7.5 Ohms, 10 Watt)								1		1	1	1		
16	853-0005	Washer, Lock-ET (#8)								1		1	1	1		
17	812-0091	Screw, Machine-Round Head (#8-32 X 2-1/2")								1		1	1	1		
18	304-0292	Insulator, Resistor								1		1	1	1		
19	336-4457	Lead (23")								1		1	1	1		
20	336-4458	Lead (2-1/2")								2		2	2	2		
21	336-5237	Lead (2-1/2")								1		1	1	1		
22	321-0175	Holder, Fuse								1		1	1	1		
23	321-0233	Fuse, 8 Ampere								1		1	1	1		

OIL TANK FUEL PUMP
(Extended Run 5.0PK-3E, 6.5PM-3E)

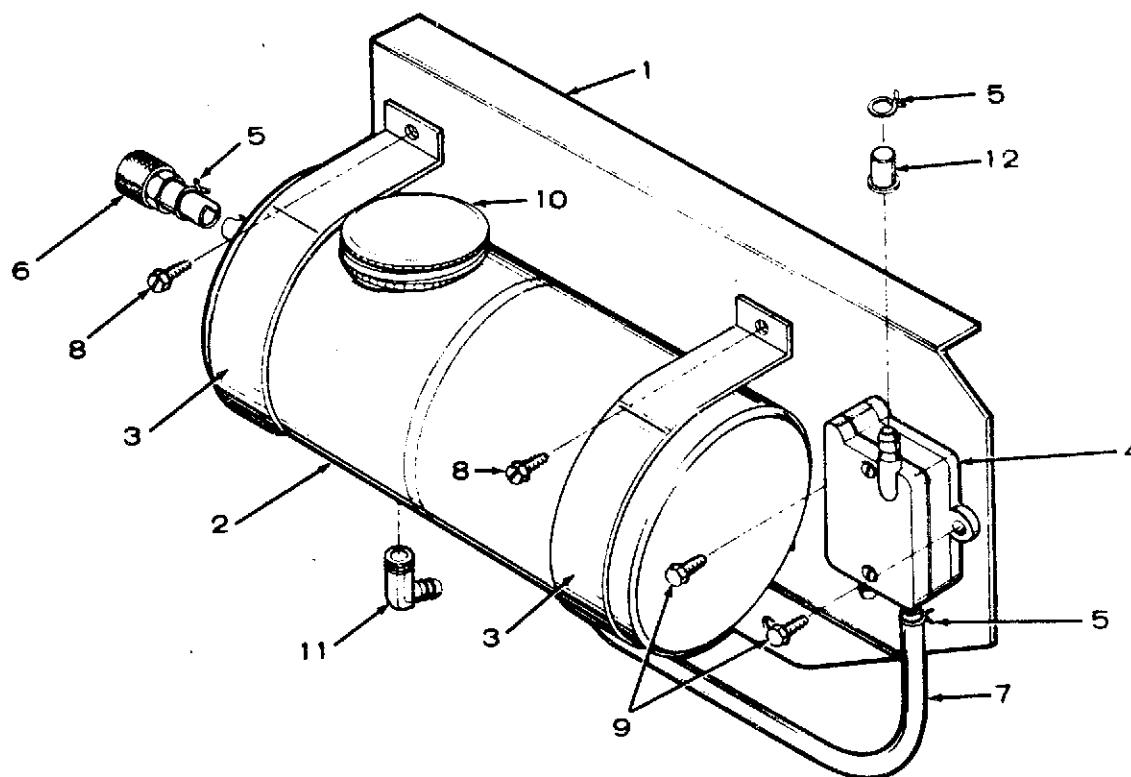


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
1	159-1088	Bracket, Oil Tank and Fuel Pump Mounting												1	1	
2	159-1091	Tank, Oil												1	1	
3	159-1090	Strap, Oil Tank Mounting												2	2	
4	149-1322	Pump, Fuel (See Separate Group for Component Parts)												1	1	
5	503-0301	Clamp, Hose												3	3	
6	502-0397	Coupling, Female-Gasoline												1	1	
7	503-1016	Hose, Fuel (1/4" ID X 12")												1	1	
8	821-0005	Screw, Cap-HWH (10-32 X 1/2")												2	2	
9	821-0014	Screw, Cap-HWH (5/16-18 X 1/2")												2	2	
10	159-1093	Cap, Oil Tank												1	1	
11	159-1094	Elbow (90°)												1	1	
12	149-1321	Cap, Fuel Pump Fitting												1	1	

FUEL PUMP PARTS
(Extended Run 5.0PK-3E, 6.5PM-3E)

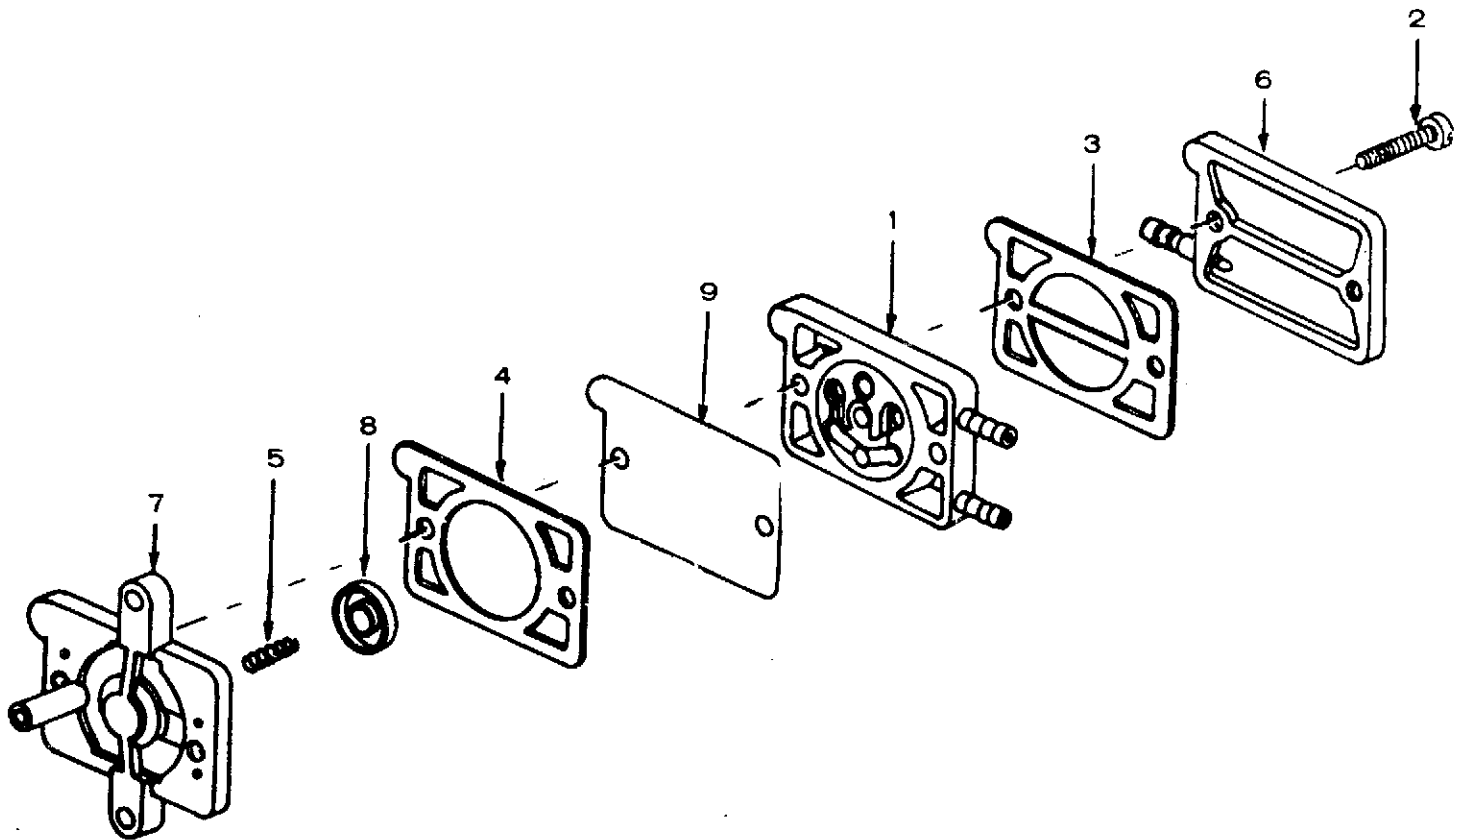

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
	149-1322	Pump, Fuel - Vacuum Pulse (Complete)												1	1	
1	142-0537	Valve Assembly, Reed (Includes Cap and Clamp)												1	1	
2	142-0540	Screw-Pump Convertor Body												2	2	
3	149-1323	Gasket, Valve Cover												1	1	
4	142-0541	Gasket, Pump Cover												1	1	
5	142-0545	Spring, Fuel Pump												1	1	
6	149-1326	Cover, Pump												1	1	
7	149-1324	Base, Pump												1	1	
8	142-0552	Plate, Drive												1	1	
9	142-0555	Diaphragm												1	1	

FUEL TANK ASSEMBLY (Extended Run 5.0PK-3E, 6.5PM-3E)

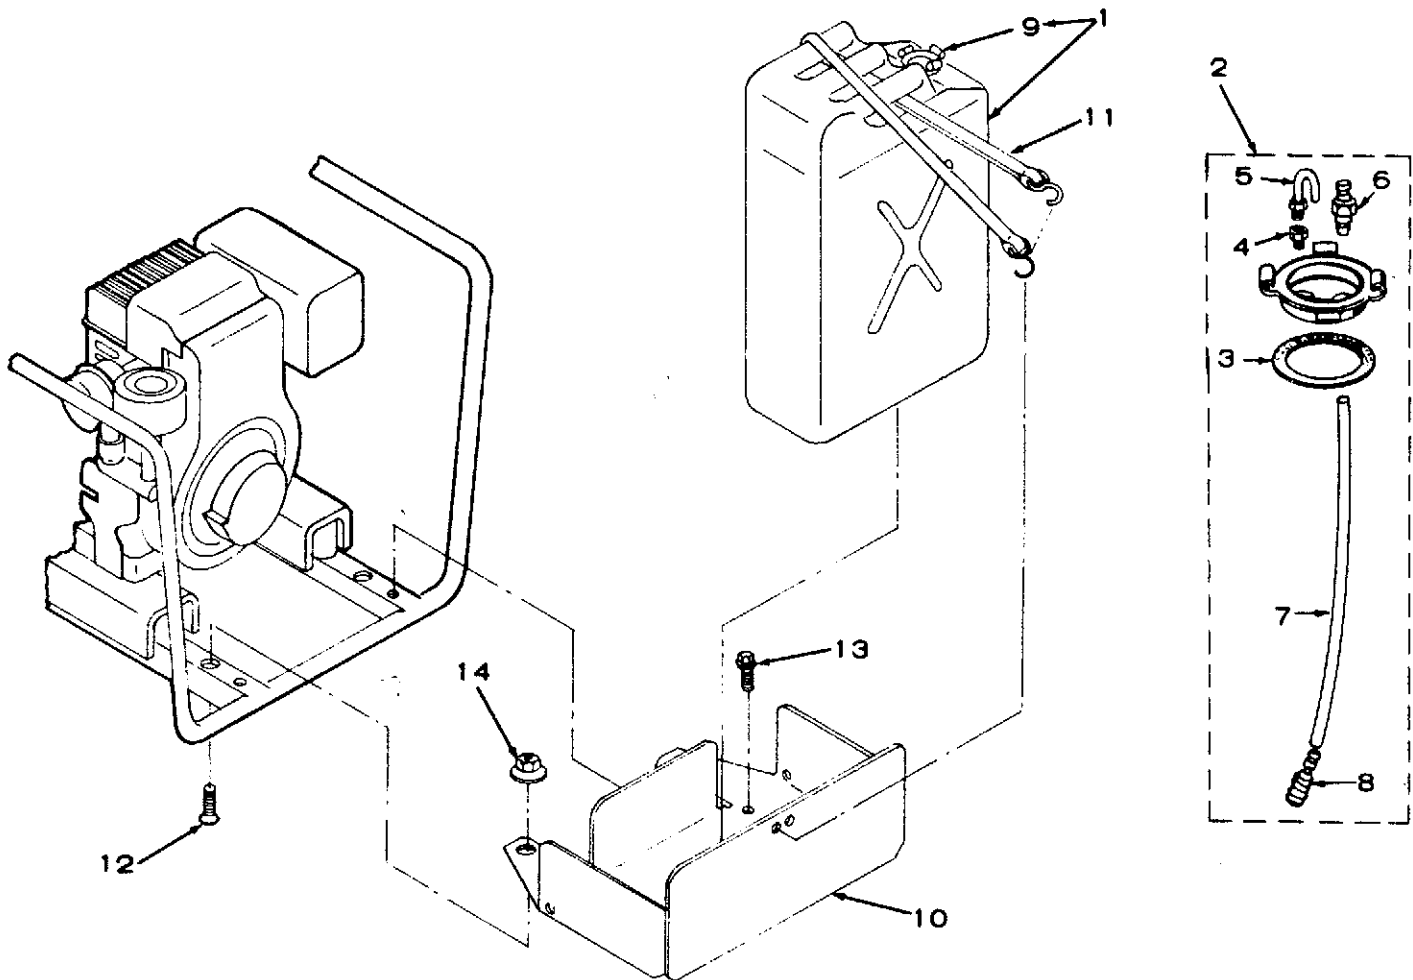


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
1	159-1022	Tank, 5 Gallon Fuel (Optional)												1	1	
2	159-1029	Cap & Pickup Assembly, Fuel (Includes Parts Marked *)												1	1	
3	159-1000	*Gasket, Fuel Tank Cap												1	1	
4	502-0003	*Connector, Inverted Male												1	1	
5	159-1030	*Vent												1	1	
6	502-0398	*Coupling, Male												1	1	
7	503-0656	*Hose, Fuel												1	1	
8	502-0399	*Filter, Ball Check												1	1	
9	159-0999	Cap, Tank (Optional)												1	1	
10	416-0722	Bracket, Fuel Tank												1	1	
11	403-1608	Strap, Holddown												1	1	
12	814-0182	Screw, Machine-Flat Head (5/16-18 X 1-1/2")												2	2	
13	815-0389	Screw, Cap-HWH - Self Tapping (1/4-20 X 3/8")												2	2	
14	870-0257	Nut, HWH (5/16-18)												2	2	

OPTIONAL PARTS SECTION


This section contains illustrated parts listings of optional accessories and factory installed options for the generator sets. Options may not be applicable to all models; for field conversions additional parts are usually required. Optional parts listed in this section are in addition or in place of those shown in the standard parts section.

IDLE-MATIC CONTROL (150-1667) - OPTIONAL

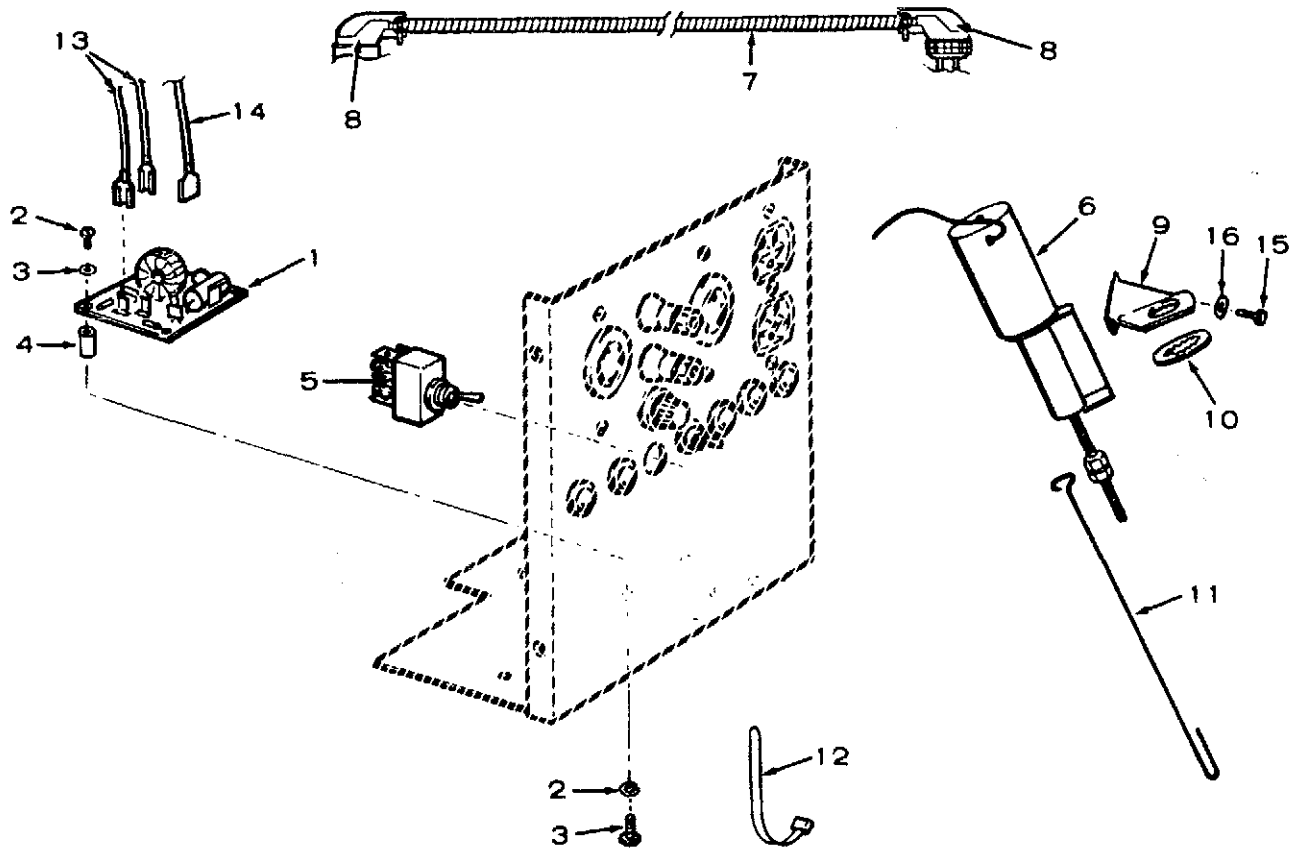


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED											
			A	B	C	D	E	F	G	H	J	K	L	
1	150-1667 300-1435	Set, Idle-Matic - Complete Board Assembly, Printed Circuit (See Separate Group For Components)				1	1	1	1	1	1	1		
2	812-0059	Screw, Machine - Round Head (#6-32 X 1/4")				1	1	1	1	1	1	1		
3	850-0020	Washer, Lock-Spring (#6)				8	8	8	8	8	8	8		
4	870-0342	Spacer, Threaded (#6-32)				8	8	8	8	8	8	8		
5	308-0412	Switch, Toggle				4	4	4	4	4	4	4		
6	307-1596	Solenoid (Includes Leads & Terminals)				1	1	1	1	1	1	1		
7	331-0136	Conduit, Flexible				1	1	1	1	1	1	1		
8	331-0127	Connector, Elbow (90°)				1	1	1	1	1	1	1		
9	307-1586	Bracket, Solenoid				2	2	2	2	2	2	2		
9	307-1548	Bracket, Solenoid									1	1		
10	854-0028	Washer, Lock-IT (5/8")				1	1	1	1	1	1	1		
11	307-1587	Link, Solenoid to Throttle									1	1		
11	307-1547	Link, Solenoid to Throttle				1	1	1	1	1				
12	332-0941	Tie, Cable				2	2	2	2	2	2	2		
13	336-2917	Lead (3-1/2")				2	2	2	2	2	2	2		
14	336-2918	Lead (8")				1	1	1	1	1	1	1		
15	800-0003	Screw, Cap-Hex Head (1/4-20 X 1/2")				1	1	1	1	1	1	1		
16	850-0040	Washer, Lock-Spring				1	1	1	1	1	1	1		

**PRINTED CIRCUIT BOARD ASSEMBLY (300-1435)
IDLE-MATIC SENSOR CONTROL (OPTIONAL)**

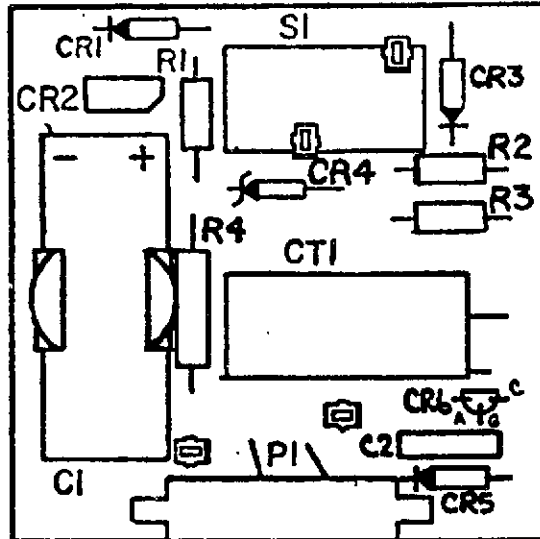


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED										
			A	B	C	D	E	F	G	H	J	K	L
	300-1435	Board Assembly Printed Circuit - Complete				1	1	1	1	1	1	1	
C 1	356-0061	Capacitor, Electrolytic (330 Mfd, 3 Volt)				1	1	1	1	1	1	1	
CR1, 3,5	357-0004	Diode, Rectifier				3	3	3	3	3	3	3	
CR4	359-0036	Diode, Zener				1	1	1	1	1	1	1	
CR6	364-0018	Rectifier, Gate Controlled				1	1	1	1	1	1	1	
CR2	364-0005	Rectifier, Gate Controlled				1	1	1	1	1	1	1	
R 2	350-0548	Resistor (10,000-Ohm, 1/2 Watt)				1	1	1	1	1	1	1	
R 1	350-0557	Resistor (56,000-Ohm, 1/2 Watt)				1	1	1	1	1	1	1	
R 3	350-0560	Resistor (100,000-Ohm, 1/2 Watt)				1	1	1	1	1	1	1	
R 4	350-0800	Resistor (1-Ohm, 1/2 Watt)				1	1	1	1	1	1	1	
CT1	315-0414	Transformer				1	1	1	1	1	1	1	
	332-1511	Terminal				4	4	4	4	4	4	4	
	518-0342	Clip				1	1	1	1	1	1	1	

IDLE-MATIC CONTROL (150-1763) - OPTIONAL

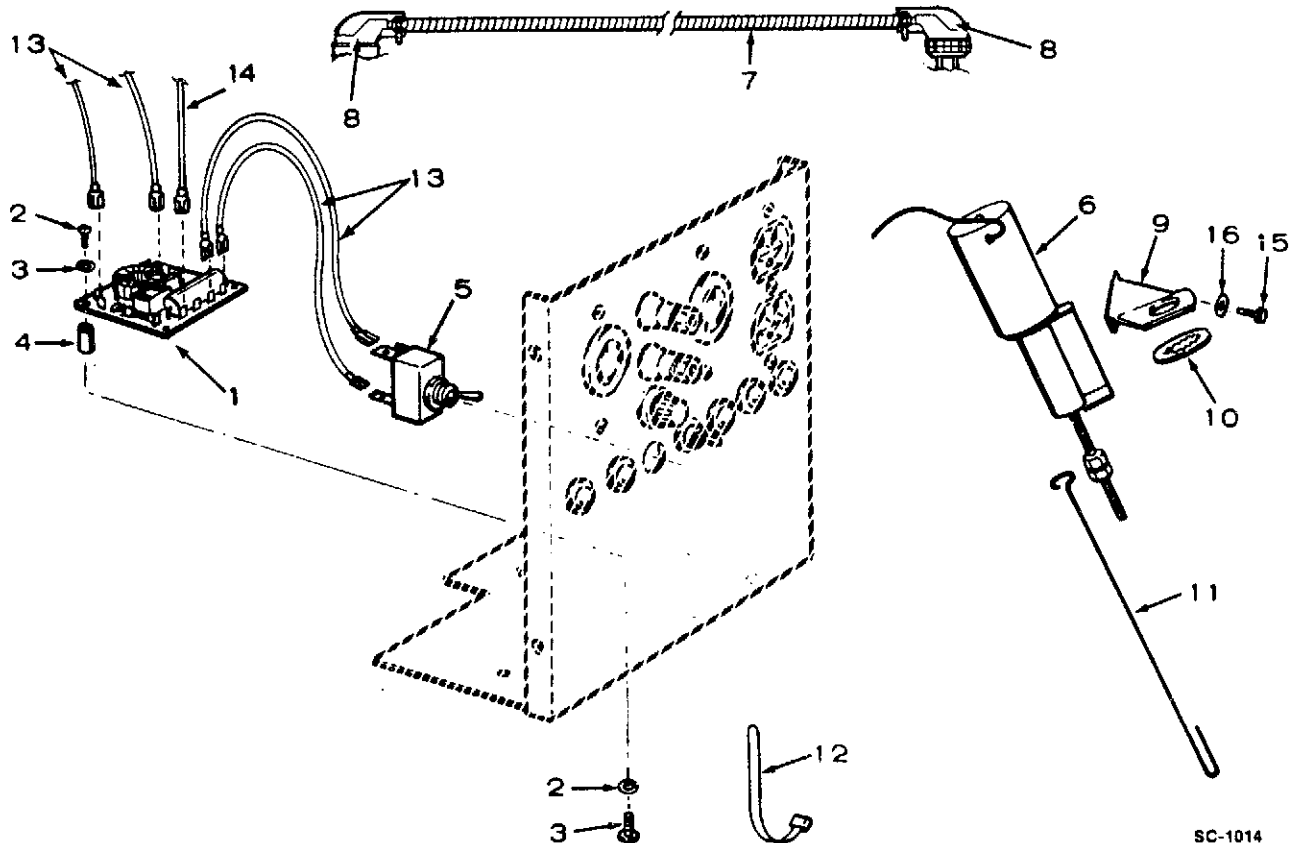


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED												
			A	B	C	D	E	F	G	H	J	K	L	M	N
1	150-1763 300-1801	Set, Idle-Matic - Complete Board Assembly, Printed Circuit (See Separate Group For Components)				1	1	1	1	1	1	1	1	1	
2	812-0059	Screw, Machine-Round Head (#6-32 X 1/4")				1	1	1	1	1	1	1	1	1	
3	850-0020	Washer, Lock-Spring (#6)				4	4	4	4	4	4	4	4	4	
4	870-0342	Spacer, Threaded (#6-32)				4	4	4	4	4	4	4	4	4	
5	308-0412	Switch, Toggle				1	1	1	1	1	1	1	1	1	
6	307-1828	Solenoid (Includes Leads & Terminals)				1	1	1	1	1	1	1	1	1	
7	331-0136	Conduit, Flexible				1	1	1	1	1	1	1	1	1	
8	331-0127	Connector, Elbow (90°)				2	2	2	2	2	2	2	2	2	
9	307-1586	Bracket, Solenoid									1	1	1	1	
9	307-1548	Bracket, Solenoid				1	1	1	1	1					
10	854-0028	Washer, Lock-IT (5/8")				1	1	1	1	1	1	1	1	1	
11	307-1587	Link, Solenoid to Throttle									1	1	1	1	
11	307-1547	Link, Solenoid to Throttle				1	1	1	1	1					
12	332-0941	Tie, Cable				2	2	2	2	2	2	2	2	2	
13	336-4796	Lead (5")				4	4	4	4	4	4	4	4	4	
14	336-5080	Lead (5")				1	1	1	1	1	1	1	1	1	
15	800-0003	Screw, Cap-Hex Head (1/4-20 X 1/2")				1	1	1	1	1	1	1	1	1	
16	850-0040	Washer, Lock-Spring				1	1	1	1	1	1	1	1	1	

**PRINTED CIRCUIT BOARD ASSEMBLY (300-1801)
IDLE-MATIC SENSOR CONTROL (OPTIONAL)**

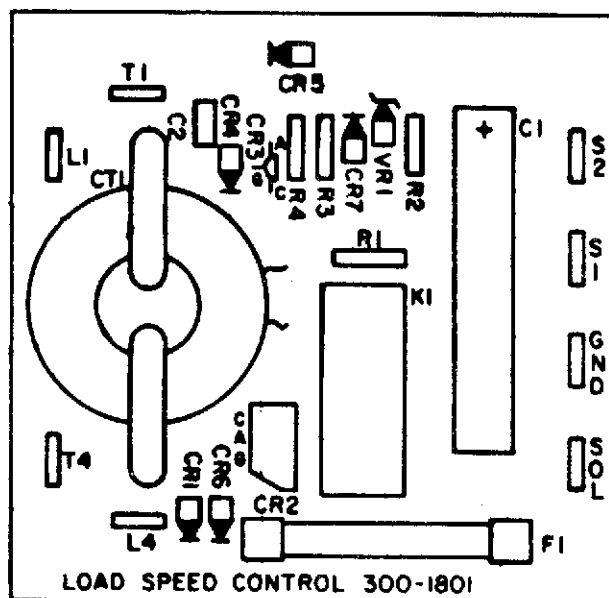


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
C1	300-1801 356-0088	Board Assembly, Complete Capacitor, Electrolytic (3300 Mfd, 6.3 Volt)				1	1	1	1	1	1	1	1	1		
C2	355-0062	Capacitor (.1 Mfd, 100 Volt)				1	1	1	1	1	1	1	1	1		
CR1, 4-7	357-0004	Diode, Rectifier				1	1	1	1	1	1	1	1	1		
CR2	364-0005	Rectifier, Gate Controlled				1	1	1	1	1	1	1	1	1		
CR3	364-0018	Rectifier, Gate Controlled				1	1	1	1	1	1	1	1	1		
CT1	315-0454	Transformer				1	1	1	1	1	1	1	1	1		
R1	350-0548	Resistor (10,000-Ohm, 1/2 Watt)				1	1	1	1	1	1	1	1	1		
R2	350-0557	Resistor (56,000-Ohm, 1/2 Watt)				1	1	1	1	1	1	1	1	1		
R3	350-0560	Resistor (100,000-Ohm, 1/2 Watt)				1	1	1	1	1	1	1	1	1		
R4	350-0800	Resistor (1-Ohm, 1/2 Watt)				1	1	1	1	1	1	1	1	1		
VR1	359-0036	Diode, Zener				1	1	1	1	1	1	1	1	1		
K1	307-1668	Relay, Idlematic				1	1	1	1	1	1	1	1	1		
F1	321-0067	Fuse, 1 Ampere				1	1	1	1	1	1	1	1	1		

BATTERY CHARGER (OPTIONAL)

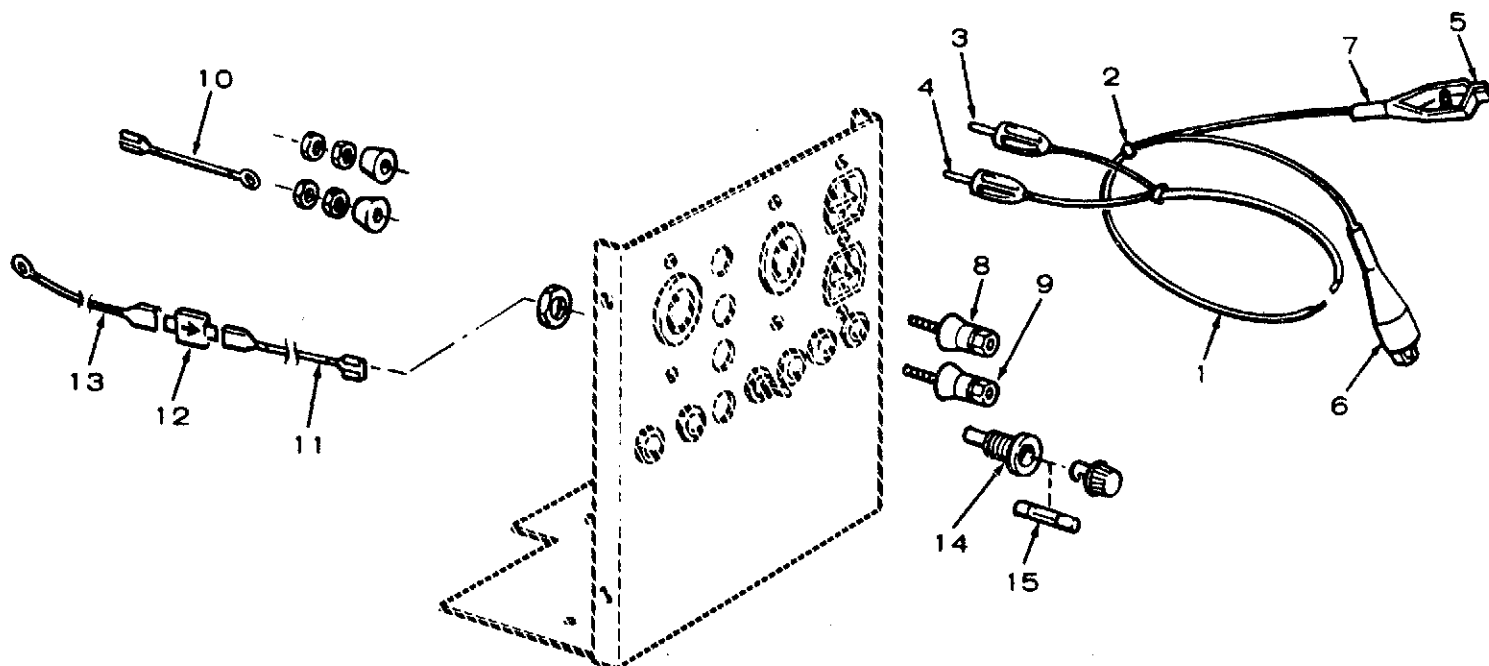

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
	305-0593	Kit, Battery Charger Complete				1	1	1	1	1	1	1	1	1		
1	305-0537	Cable Assembly (Includes Parts Marked *)				1	1	1	1	1	1	1	1	1		
2	332-0942	*Tie, Cable				2	2	2	2	2	2	2	2	2		
3	323-0888	*Plug, Banana (Red)				1	1	1	1	1	1	1	1	1		
4	323-0889	*Plug, Banana (Black)				1	1	1	1	1	1	1	1	1		
5	332-1446	*Clip, Battery				2	2	2	2	2	2	2	2	2		
6	332-1447	*Insulator, Clip (Red)				1	1	1	1	1	1	1	1	1		
7	332-1448	*Insulator, Clip (Black)				1	1	1	1	1	1	1	1	1		
8	332-0785	Post, Binding (Red)				1	1	1	1	1	1	1	1	1		
9	332-0784	Post, Binding (Black)				1	1	1	1	1	1	1	1	1		
10	336-2170	Lead (6")				1	1	1	1	1	1	1	1	1		
11	336-4787	Lead (2-1/2")				1	1	1	1	1	1	1	1	1		
12	357-0030	Rectifier, Silicon				1	1	1	1	1	1	1	1	1		
13	226-1876	Lead (27")				1	1	1	1	1	1	1	1	1		
14	321-0175	Holder, Fuse				1	1	1	1	1	1	1	1	1		
15	321-0233	Fuse, 8 Ampere				1	1	1	1	1	1	1	1	1		
		* - Parts Included In 305-0537 Cable Assembly														

SIDE MOUNTED CONTROL (OPTIONAL)

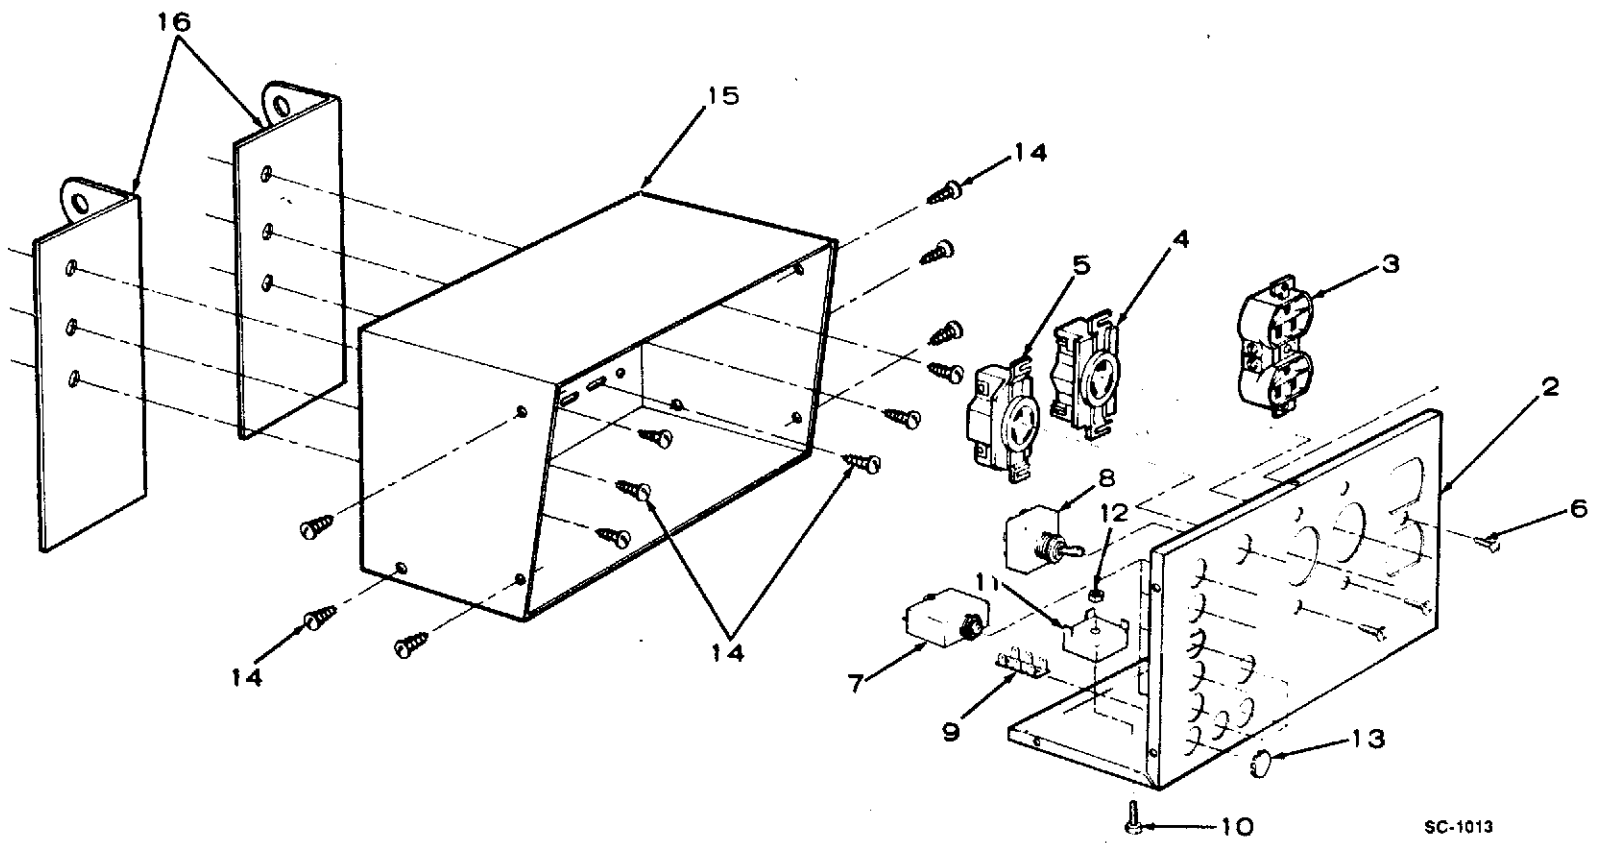


SC-1013

SIDE MOUNTED CONTROL (OPTIONAL)


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED											
			A	B	C	D	E	F	G	H	J	K	L	
1	300-1836	Control Assembly (Includes Parts Marked *)						1	1	1				
1	300-1962	Control Assembly (Includes Parts Marked &)									1	1		
2	301-5613	*&Panel, Receptacle						1	1	1	1	1		
3	323-1104	*&Receptacle, Duplex (15 Amp, 120 Volt)						1	1	1	1	1		
4	323-1107	*&Receptacle, Twistlock (30 Amp, 120 Volt)						1	1	1	1	1		
5	323-1108	* Receptacle, Twistlock (20 Amp, 240 Volt)						1	1	1				
5	323-1110	&Receptacle, Twistlock (30 Amp, 240 Volt)									1	1		
6	822-2030	*&Screw, Machine - Pan Head W/ET (#6-32 x 3/8")						5	5	5	5	5		
7	BREAKER, CIRCUIT													
	320-0540	*&15 Ampere						2	2	2	2	2		
	320-0541	* 20 Ampere						2	2	2				
	320-0543	*&30 Ampere						1	1	1	3	3		
8	308-0479	*&Switch, Toggle						1	1	1	1	1		
9	332-2139	*&Terminal, Tab						1	1	1	1	1		
10	822-2050	*&Screw Machine - Pan Head W/ET (#8-32 x 3/4")						1	1	1	1	1		
11	305-0548	*&Rectifier, Bridge						1	1	1	1	1		
12	860-0008	*&Nut, Hex (#8-32)						1	1	1	1	1		
13	517-0133	*&Plug, Hole (1/2")						4	4	4	4	4		
14	815-0498	Screw, Cap-Hex Head w/Cone Washer (#8-32 x 3/8")						12	12	12	12	12		
15	301-4960	Wrapper, Control Box						1	1	1	1	1		
16	323-1127	Bracket, Mounting - Control Box						2	2	2	2	2		
* -	Parts Included in 300-1836 Control Assembly													
& -	Parts Included in 300-1962 Control Assembly													

RECEPTACLE PLUG (OPTIONAL)

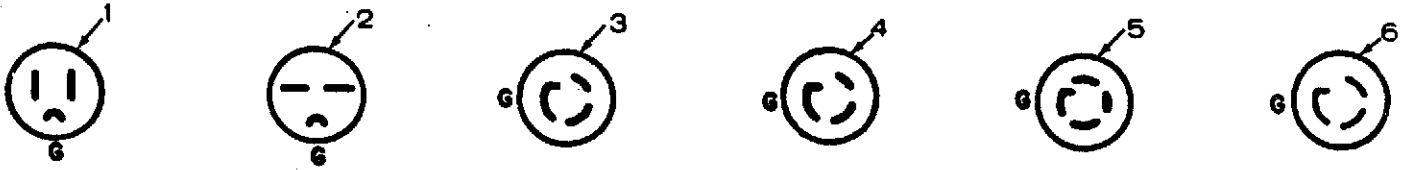


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
1	323-0988	*Plug, Receptacle - NEMA #5-15P-(15 Amp, 120 Volt)					AS	REQUIRED								
2	323-0216	*Plug, Receptacle - NEMA #6-15P-(15 Amp, 240 Volt)					AS	REQUIRED								
3	323-0862	*Plug, Twistlock - NEMA #L-30P-(30 Amp, 120 Volt)					AS	REQUIRED								
4	323-0863	*Plug, Twistlock - NEMA #L6-20P-(20 Amp, 240 Volt)					AS	REQUIRED								
5	323-0952	*Plug, Twistlock - NEMA #L14-30P-(30 Amp, 240 Volt)					AS	REQUIRED								
6	323-1143	*Plug, Twistlock - NEMA #L6-30P-(30 Amp, 240 Volt)					AS	REQUIRED								
* - Select plug according to receptacle configuration illustrated above.																

E-Z TOTE HANDLE (OPTIONAL)

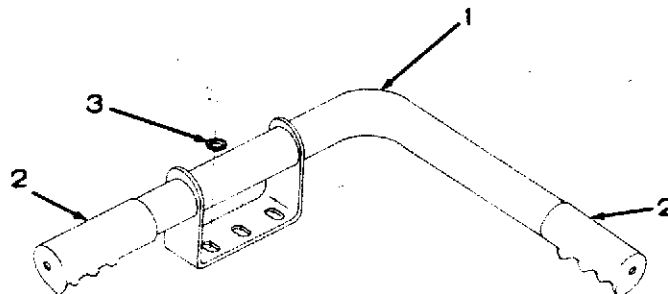


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED									
			A	B	C	D	E	F	G	H	J	K
1	410-0735	Kit, E-Z Tote Handle	1	1								
2	403-1573	Handle, Carrying	1	1								
3	403-1477	Grip, Handle	2	2								
4	856-0008	Washer, Lock-EIT (5/16")	3	3								

E-Z WHEELER (OPTIONAL)

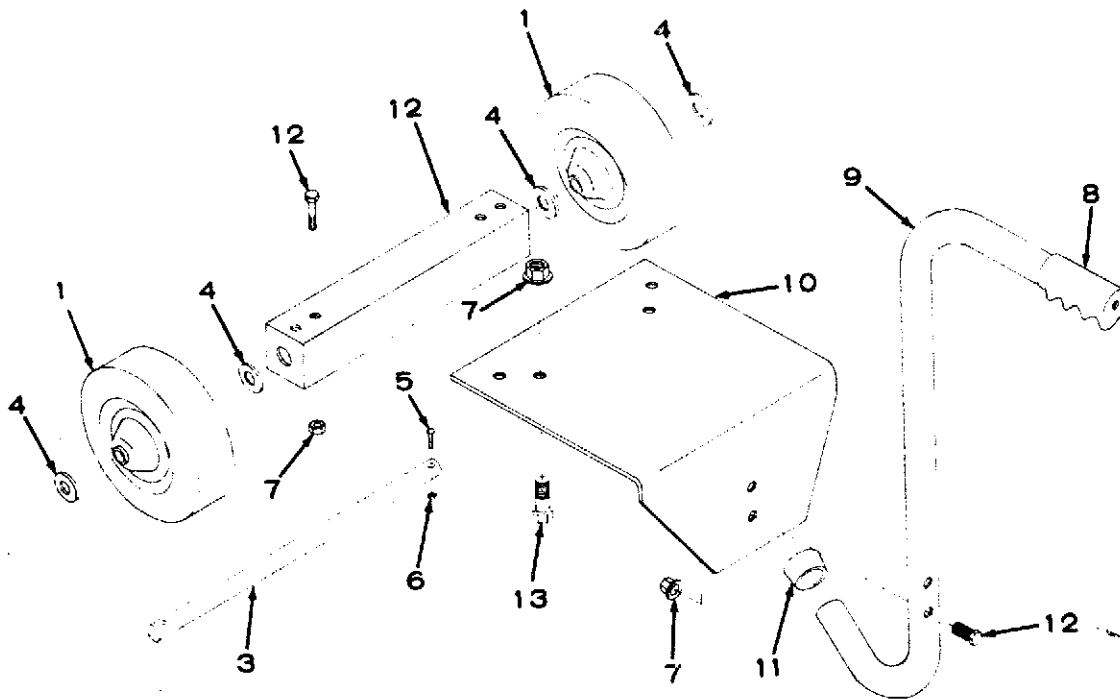


REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED											
			A	B	C	D	E	F	G	H	J	K	L	
	410-0734	Kit, E-Z Wheeler	1	1	1	1								
1	410-0618	Wheel	2	2	2	2								
2	410-0724	Bracket, Axle Support	1	1	1	1								
3	410-0723	Axle	1	1	1	1								
4	526-0219	Washer, Flat (17/32" ID x 1" OD x 1/8")	4	4	4	4								
5	812-0065	Screw, Machine - Round Head (6-32 x 5/8")	2	2	2	2								
6	870-1183	Nut, Hex-W/ET (6-32)	2	2	2	2								
7	870-0257	Nut, HWH (5/16-18)	8	8	8	8								
8	403-1477	Grip, Handle	1	1	1	1								
9	410-0731	Handle	1	1	1	1								
10	410-0730	Support Plate, Handle	1	1	1	1								
11	403-0588	Tip, Rubber (1")	1	1	1	1								
12	800-0031	Screw, Cap-Hex Head (5/16-18 x 1-1/2")	4	4	4	4								
13	821-0017	Screw, Cap-HWH (5/16-18 x 1/2")	4	4	4	4								

DOLLY (OPTIONAL)

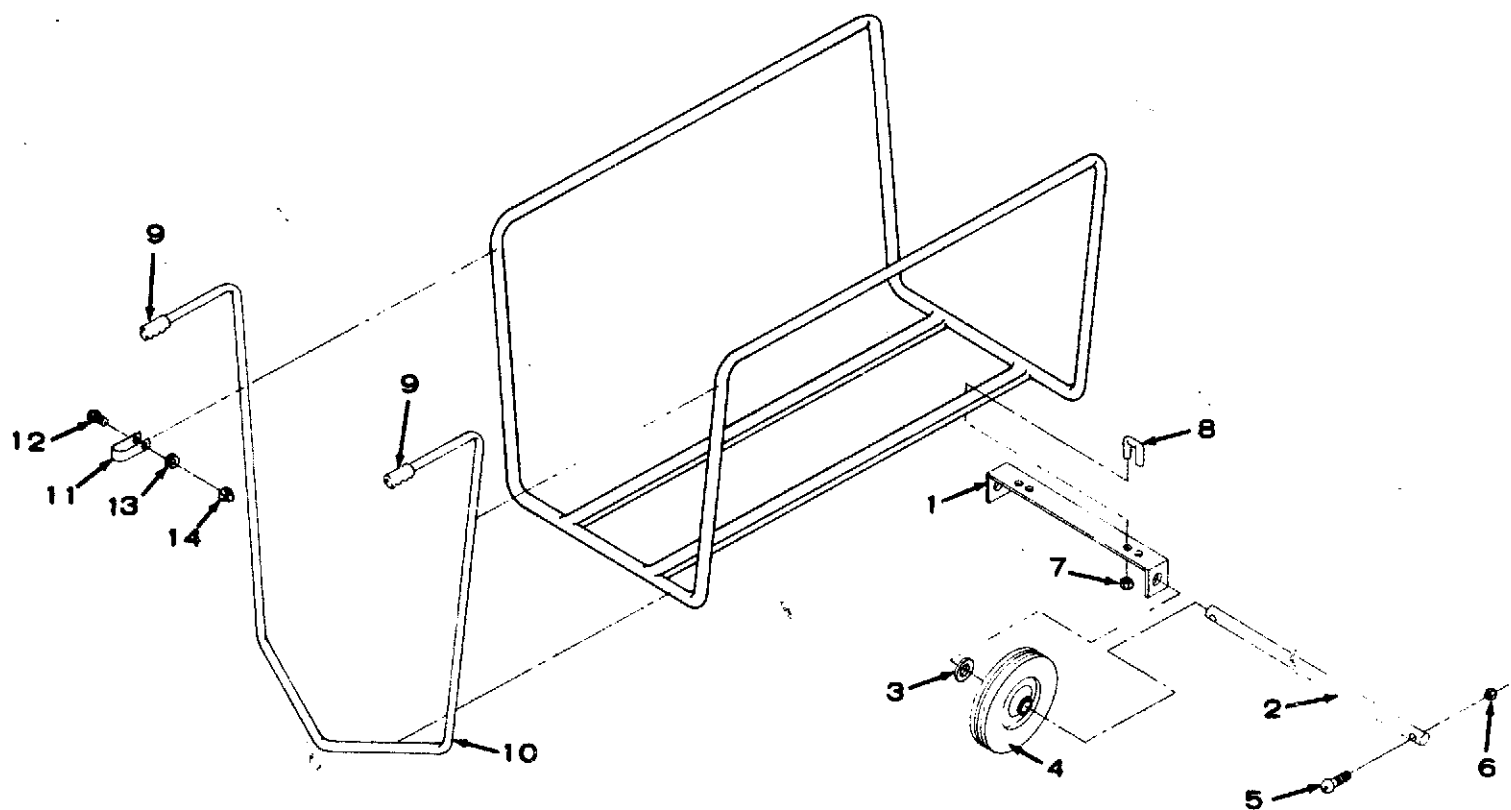

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED													
			A	B	C	D	E	F	G	H	J	K	L	M	N	
	410-0732	Dolly Package - Complete					1	1	1	1	1	1	1	1		
1	410-0724	Bracket, Axle Support					1	1	1	1	1	1	1	1		
2	410-0723	Axle, Dolly					1	1	1	1	1	1	1	1		
3	526-0219	Washer, Flat (17/32" ID X 1" OD X 1/8")					4	4	4	4	4	4	4	4		
4	410-0618	Wheel, Dolly					2	2	2	2	2	2	2	2		
5	812-0065	Screw, Machine - Round Head (6-32 X 5/8")					2	2	2	2	2	2	2	2		
6	870-1183	Nut, Hex-W/ET (6-32)					2	2	2	2	2	2	2	2		
7	870-0257	Nut, HWH (5/16-18)					4	4	4	4	4	4	4	4		
8	410-0725	Bolt-U (Axle)					2	2	2	2	2	2	2	2		
9	403-1477	Grip, Handle					2	2	2	2	2	2	2	2		
10	410-0719	Handle, Dolly					1	1	1	1	1	1	1	1		
11	410-0720	Bracket, Handle					4	4	4	4	4	4	4	4		
12	800-0009	Screw, Cap-Hex Head (1/4-20 X 1-1/2")					4	4	4	4	4	4	4	4		
13	870-0212	Nut, HWH (1/4-20)					4	4	4	4	4	4	4	4		
14	866-0001	Nut, Hex-Acorn (1/4-20)					4	4	4	4	4	4	4	4		

DOLLY (OPTIONAL)

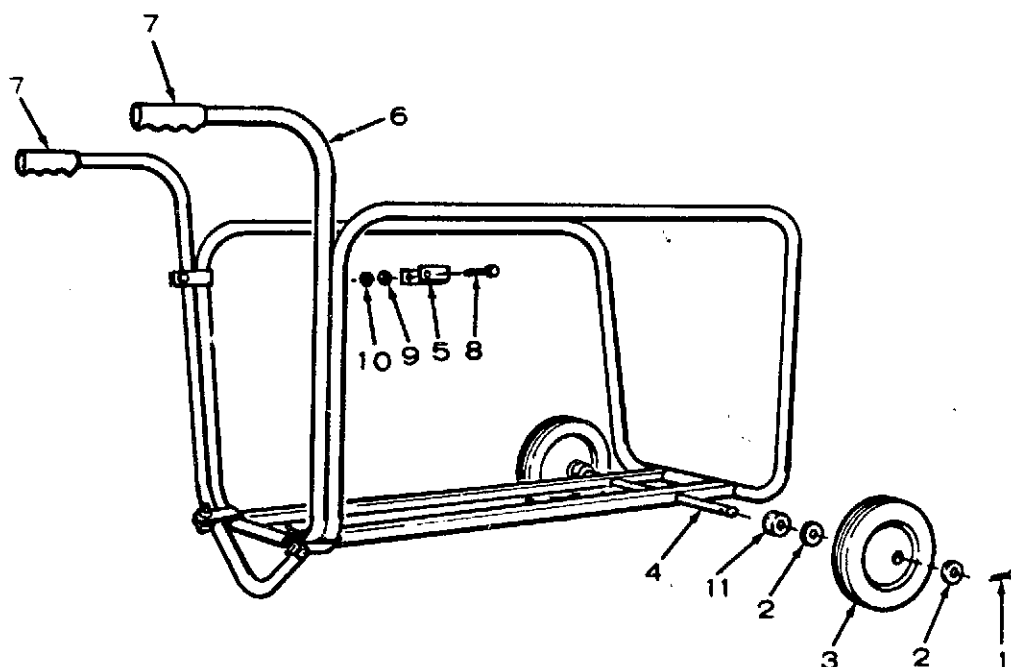

REF NO.	PART NUMBER	PART DESCRIPTION	QUANTITY USED										
			A	B	C	D	E	F	G	H	J	K	L
	410-0722	Dolly Package - Complete					1	1	1	1	1	1	
1	516-0042	Pin, Cotter					2	2	2	2	2	2	
2	526-0219	Washer, Flat (17/32" ID X 1" OD X 1/8" THK)					4	4	4	4	4	4	
3	410-0618	Wheel, Dolly					2	2	2	2	2	2	
4	410-0721	Axle, Dolly					1	1	1	1	1	1	
5	410-0720	Bracket, Handle					4	4	4	4	4	4	
6	410-0719	Handle, Dolly					1	1	1	1	1	1	
7	403-1477	Grip, Handle					2	2	2	2	2	2	
8	800-0009	Screw, Cap - Hex Head (1/4-20 X 1-1/2")					4	4	4	4	4	4	
9	870-0212	Nut, Hex - Locking (1/4-20)					4	4	4	4	4	4	
10	866-0001	Nut, Hex - Acorn (1/4-20)					4	4	4	4	4	4	
11	402-0421	Spacer, Rubber					2	2	2	2	2	2	